
ASSEMBLY INSTRUCTION LOT# FPF18-0024 ACCENT CHAIR

PARTS LIST							
PARTS#	PARTS NAME	DRAWING	QTY	PARTS#	PARTS NAME	DRAWING	QTY
A	FLAT WASHER 5/16"	0	11	L	PLUG	C	2
В	LOCK WASHER 5/16"	0	11	М	FRONT LEG		2
С	BOLTS DIA 5/16"X2-1/2"		8				Ľ
D	BOLTS DIA 5/16"X1 3/4"		3	N	LEFT ARM		1
Е	ALLEN WRENCH 5/16"		1	0	RIGHT ARM		1
F	FLAT WASHER 1/4"	0	4	Р	CUSHION		1
G	LOCK WASHER 1/4"	0	4	\vdash			_
Н	BOLTS DIA 1/4"X1 1/2"		2	Q	SEAT FRAME		1
I	BOLTS DIA 1/4"X2"		2	R	CHAIR BACK		1
J	ALLEN WRENCH 1/4"		1				
K	WOOD SCREW	© 111111>	5	1		السكنت	ĺ

Note: Do Not tighten bolts until assembly is fully completed.

STEP :

Remove all parts from carton and separate them into part number groups as indicated on the part list.Place the chair back (S) on a smooth flat surface with the holes facing up.Loosely tighten all bolts until instructed to fully tighten at the end of step.

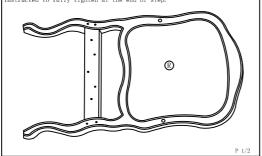

ASSEMBLY INSTRUCTION LOT# FPF18-0024 ACCENT CHAIR

