
 






 


 

 





ASSEMBLY INSTRUCTION

LOT#98054 OVAL BACK ARM CHAIR

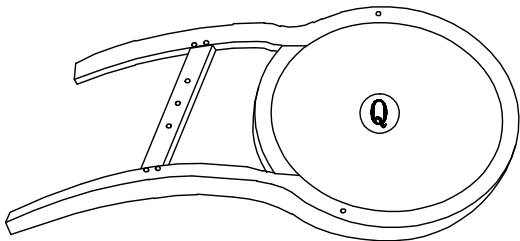
PARTS LIST

PARTS#	PARTS NAME	DRAWING	QTY	PARTS#	PARTS NAME	DRAWING	QTY
A	FLAT WASHER 5/16"X 3/4"		9	K	WOOD SCREW		4
B	LOCK WASHER 5/16"		9	L	PLUG		2
C	BOLTS DIA 5/16"X3"		4	M	LEFT ARM		1
D	BOLTS DIA 5/16"X2-1/2"		4	N	RIGHT ARM		1
E	BOLTS DIA 5/16"X1 1/2"		1	O	CUSHION		1
F	ALLEN WRENCH 5/16"		1	P	SEAT FRAME		1
G	FLAT WASHER 1/4"X 5/8"		2	Q	CHAIR BACK		1
H	LOCK WASHER 1/4"		2				
I	BOLTS DIA 1/4"X1 1/2"		2				
J	ALLEN WRENCH 1/4"		1				

Note: Do Not tighten bolts until assembly is fully completed.

STEP 1.

Place the chair back (Q) on a smooth flat surface with the holes facing up. Loosely tighten all bolts until instructed to fully tighten at the end of step.



STEP 2.

Attach seat frame (P) to chair back (Q). Insert flat washer (A) lock washer (B) and bolts (E) through center hole of back rail. Insert flat washer (A) lock washer (B) and bolts (C) through corner block to back leg. Use allen wrench (F) to secure bolts (C, E). Tighten slightly not fully.

