

ASSEMBLY INSTRUCTIONS

Description: Floor Lamp

Important Safety Instructions:


- For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into your outlet, do not force it, contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into cord's socket. Never alter the plug in any way.
- These instructions are provided for your safety. It is important that they are read carefully and completely before assembling fixture.
- This fixture has been rated for to (1) 150-watt maximum TYPE A bulb (no included) or (1) 25-watt compact fluorescent light bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

Pre-assembly:

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts Enclosed:

Item	Description	QTY
A	Leg	3
B	Socket Assembly	1
C	Harp	1
D	Shade	1
E	Finial	1
F	Protective plug cover	1
G	Wire	1

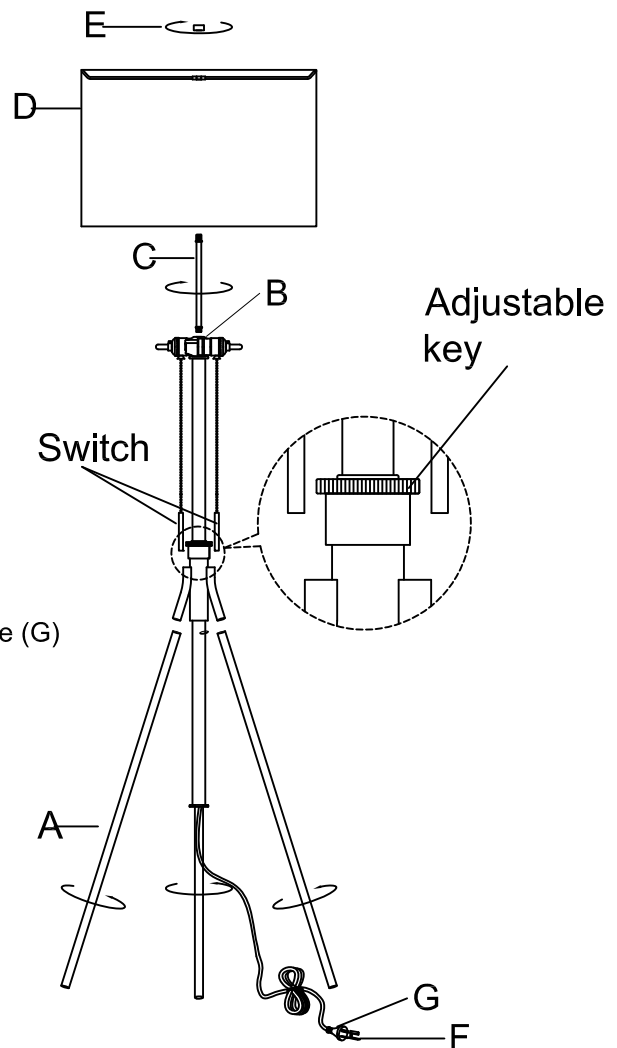

To Assemble:

- Step 1. Attach each leg (A) to bottom of socket assembly (B),
- Step 2. Attach harp (C) to socket assembly (C)
- Step 3. place shade (D) onto harp (C)
- Step 4. Tighten finial (E) and turn clockwise to secure.
- Step 5. Insert bulb (not Included)
- Step 6. Remove protective plug cover (F) from the plug of wire (G)
- Step 7 Plug into proper electrical outlet and test fixture.
- Step 8. Assembly is complete.

To adjust base height:

- * Loosen the adjustment key by turning counter-clockwise and select the desired height.
- * Secure by turning adjustment key clockwise to tighten.

Care Instructions:

- Wipe with soft dry cloth only
- Always avoid the use harsh chemicals or abrasives as they may damage the finish

Thank you for your purchase