



 
 










SONOMA DINING SIDE CHAIR

Assembly instructions:

PARTS LIST

No.	DESCRIPTION	IMAGE	Q'TY
P1	BACK FRAME		1
P2	CUSHION FRAME		1
P3	RIGHT LEG		1
P4	LEFT LEG		1
P5	RIGHT STRECHER		1
P6	LEFT STRECHER		1


HARDWARE LIST

No.	DESCRIPTION	IMAGE	Q'TY
H1	BOLT (Ø1/4" X 75 MM)		4
H2	BOLT (Ø1/4" X 40 MM)		2
H3	SPRING WASHER (Ø5/16"x13)		10
H4	FLAT WASHER (Ø5/16"x16)		10
H5	NUT (Ø5/16"x12)		4
H6	SCREW (4 x 50mm)		4
H7	ALLEN KEY (40x60mm)		1
H8	SPANNER		1


NOTE: PO # is located underneath/ at the back side of each item. Please be prepared to provide this # should any claim be necessary.

CAUTION: Item is heavy. Assembly should be performed by two people.


1

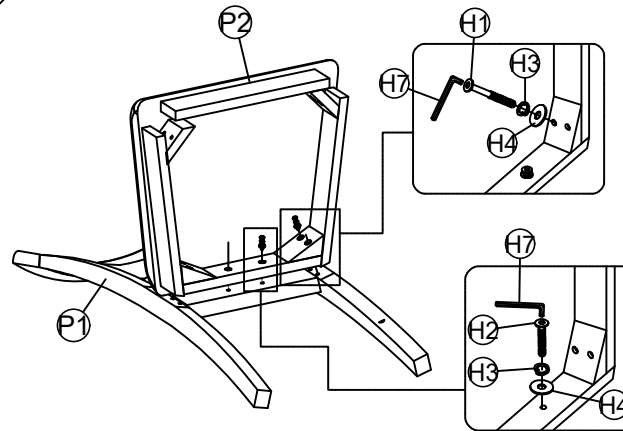


2

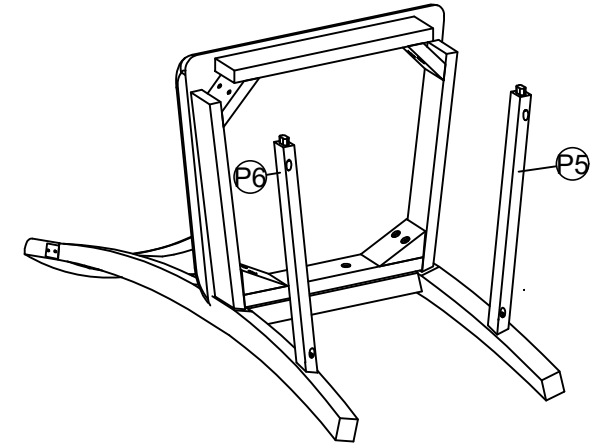

3

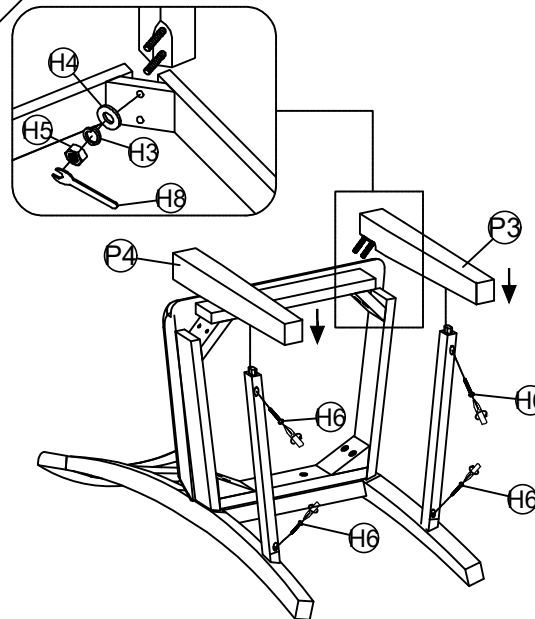

4

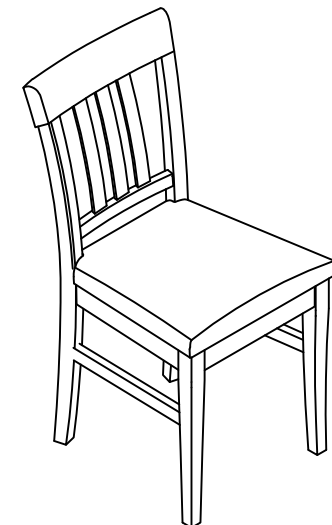

ASSEMBLY COMPLETED