 


ASSEMBLY INSTRUCTIONS

Kai Accent Cabinet

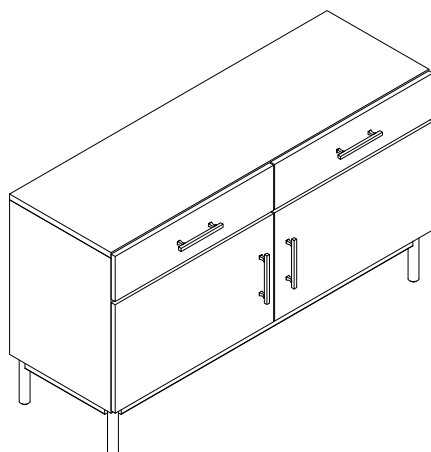

CHAPEL·HILL

 


Please read below before assembly

- Assemble the product on a flat, soft surface such as a carpet or cloth to prevent scratching the finish.
- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.
- Failure to follow these instructions may cause the bolts to misalign during assembly.

DISCLAIMERS:


- WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.
- BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY AND ENSURE STABILITY.

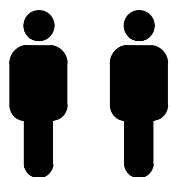

PEOPLE




 100
lbs top
WEIGHT LIMIT

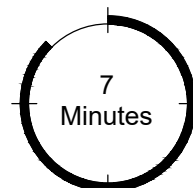

ESTIMATED TIME

 TOOLS REQUIRED (NOT INCLUDED)



PHILLIPS HEAD SCREW DRIVER

 

Important safety Instructions :

- Please carefully read all instructions before assembling.
- For your safety, assembly by two or more adults is recommended.
- Keep instructions for furniture use.



Pre-Assembly


- Do not discard any cotarts until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware form box along with any plastic protective packging.

PART LIST

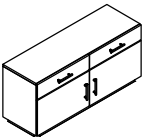
Item	Description		QTY
P1	Kai Accent Cabinet		1 Pc
P2	Legs		4 Pcs

  HARDWARE LIST



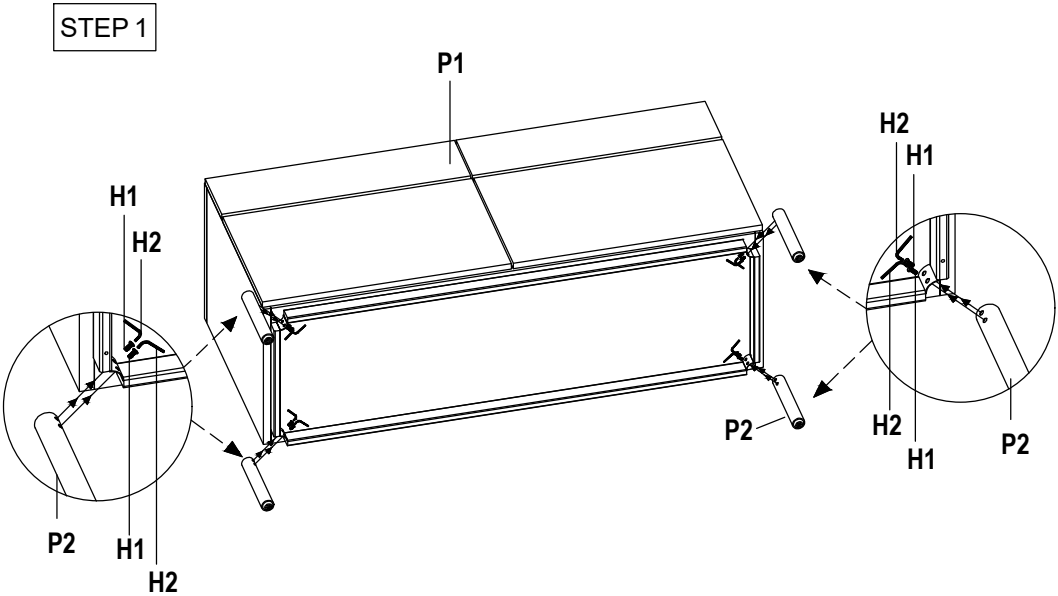


Item	Description		QTY
H1	JCBC M6 x 15mm		8 Pcs
H2	Allen Key L4		1 Pc

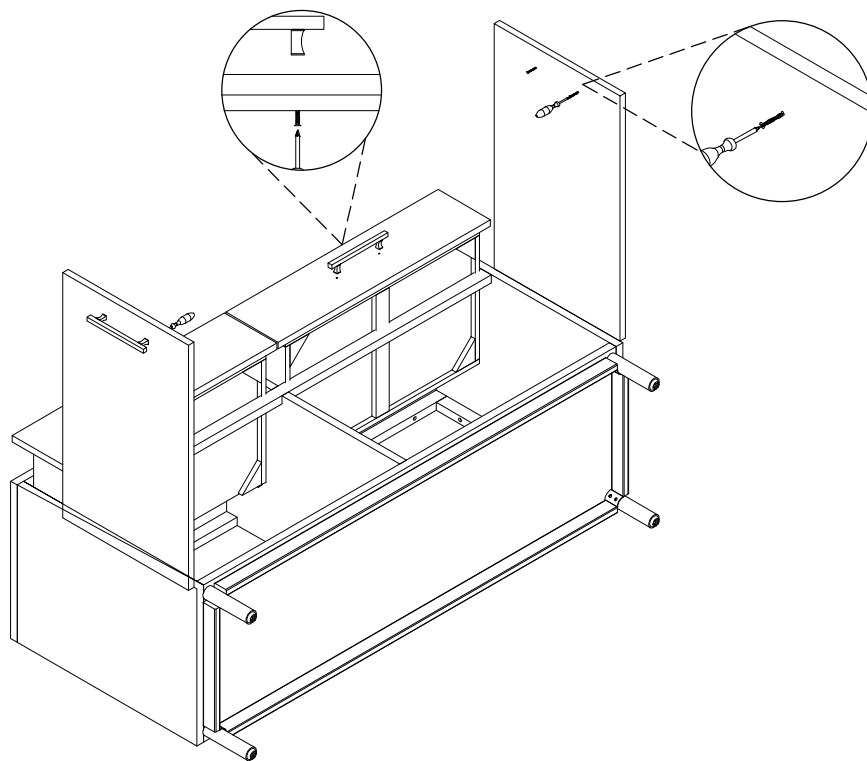 



STEP 2



ANTI TIP KIT

Item	Description		QTY
A1	Screw Ø8 x 2"		2 Pcs
A2	Screw Ø8 x 3/4"		2 Pcs
A3	Metal Anchor		4 Pcs
A4	Restrain Strap		2 Pcs
A5	Fischer		2 Pcs

  STEP 3




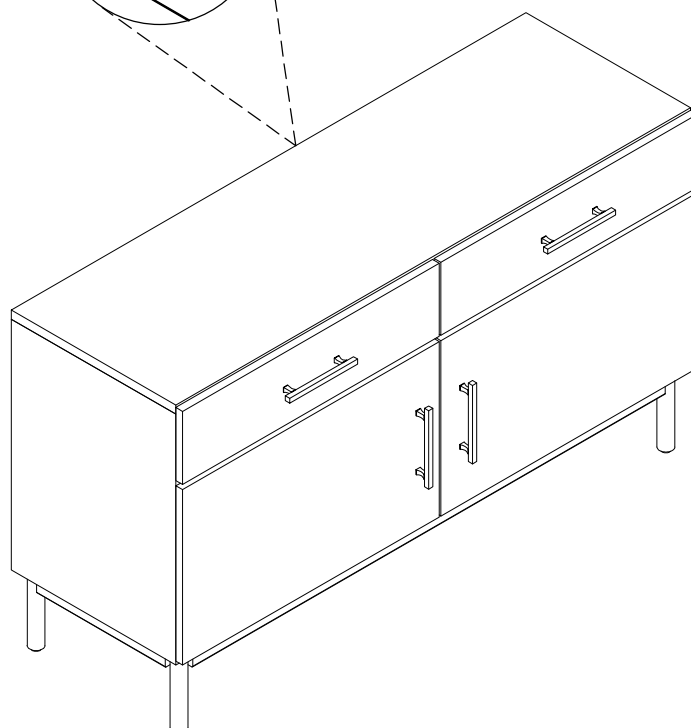
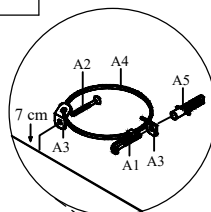


⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover :

     - ALWAYS install tipover restraint provided.
- NEVER put a TV on the product.
- NEVER allowed children to stand, climb, or hang on drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

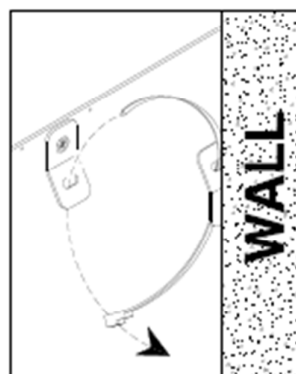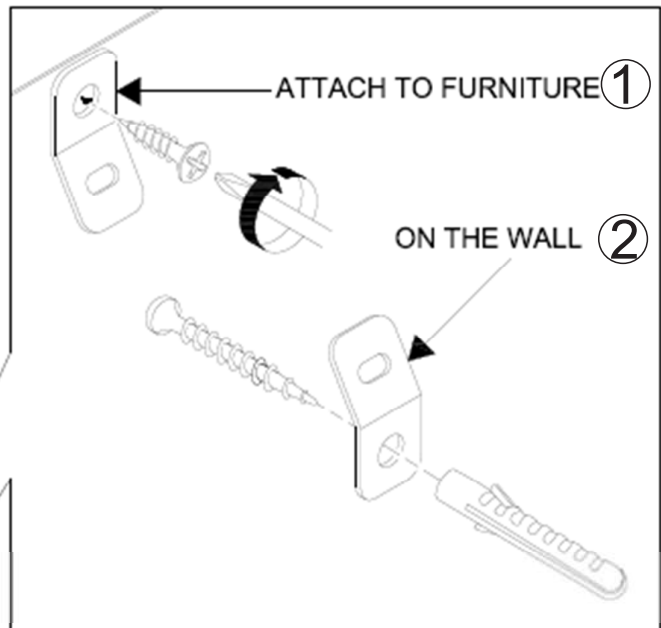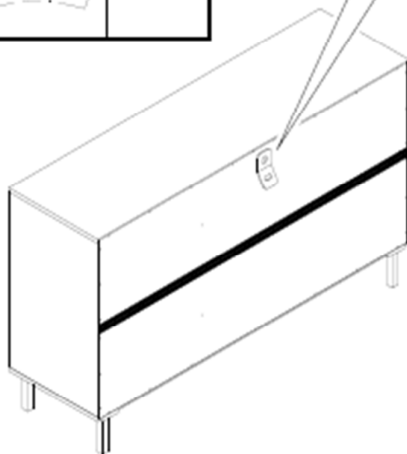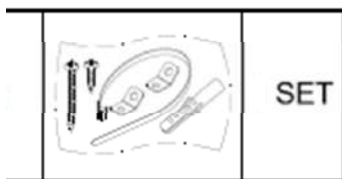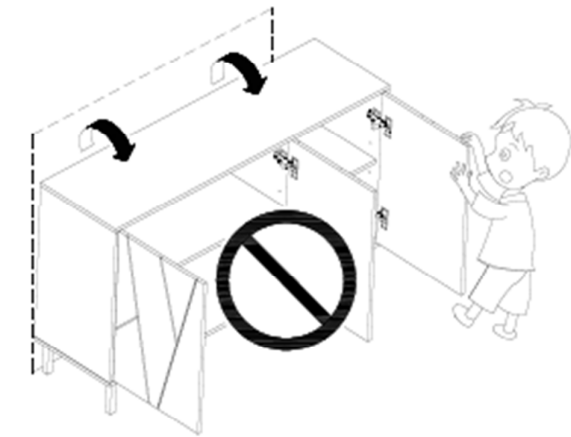

③

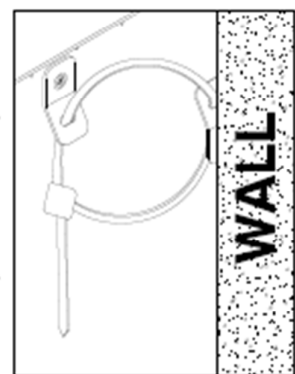 

④

Care & Maintenance

Do...



Wipe up spills immediately.



Dust and pick-up spills using a clean, non-colored, lint-free, dry cloth.



Use mild non-abrasive soap and water.

Don't...



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Do not place furniture in direct sunlight.



Do not place furniture near heating or cooling vents.



Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside. For indoor use only.