

ASSEMBLY INSTRUCTIONS

Description: Rocket Loveseat






Important safety instructions:

- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.






 
Pre-assembly:


- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

Parts List

| Item | Description | QTY |
|------|--|-----|
| P1 | Right arm  | 1 |
| P2 | Light arm  | 1 |
| P3 | Seat Cushion  | 1 |
| P4 | Back Cushion  | 1 |
| P5 | Stretcher  | 1 |

Hardware List

| Item | Description | QTY |
|------|---|-----|
| H1 | Bolt Ø1/4"x2"  | 12 |
| H2 | Lock Washer 1/4"  | 12 |
| H3 | Big flat washer 1/4" (19mm)  | 6 |
| H4 | Small flat washer 1/4" (12mm)  | 6 |
| H5 | Allen Wrench 1/4"  | 1 |
| H6 | Wooden Plug  | 6 |

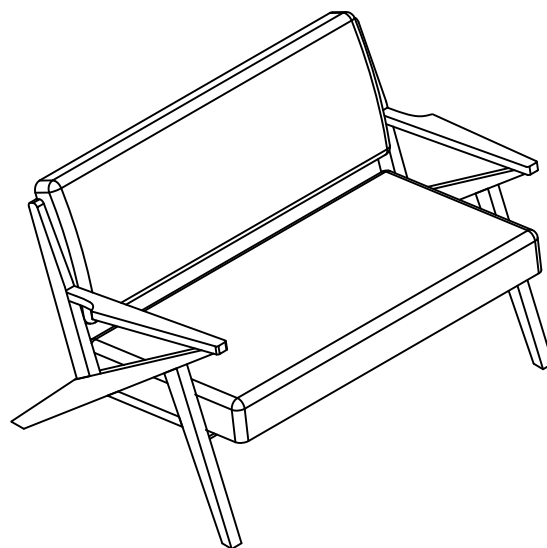






DISCLAIMER:

WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

Assembly Procedures:

Step 1. Assemble the loveseat on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Open the bottom covering, then attach right arm (P1) to seat cushion (P3) according to the label "R" on the right arm (P1), seat cushion (P3). Loosely tighten by Allen wrench (H5).

- (H1)x3 Bolts Ø1/4"x2" 
 (H2)x3 Lock Washers 1/4" 
 (H3)x3 Big flat washers 1/4" (19mm) 
 (H5)x1 Allen Wrench 1/4" 

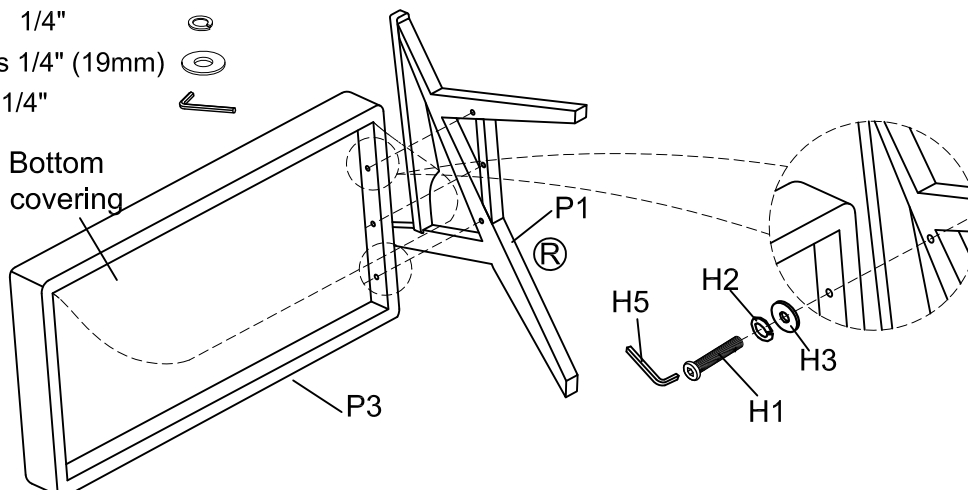


Step 2. Attach right arm (P1) to back cushion (P4) and stretcher (P5) according to the label "R" on the right arm (P1), seat cushion (P3) and back cushion (P4). Loosely tighten by Allen wrench (H5).

(H1)x3 Bolts Ø1/4"x2"

(H2)x3 Lock Washers 1/4"

(H4)x3 Small flat washers 1/4" (12mm)

(H5)x1 Allen Wrench 1/4"

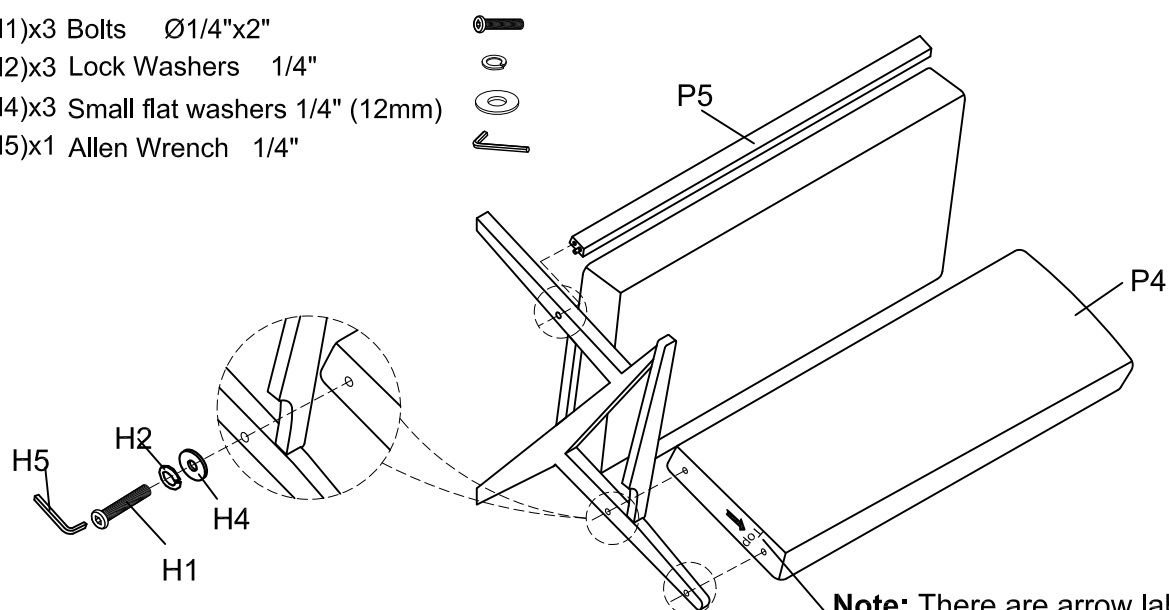

Note: There are arrow label and "Top" label at side of back cushion. Make sure the back cushion on right position.


Step 3. Attach left arm (P2) to back cushion (P4), seat cushion (P3) and stretcher (P5) according to the label "L" on the left arm (P2), seat cushion (P3) and stretcher (P5). Loosely tighten by Allen wrench (H5).

(H1)x3 Bolts Ø1/4"x2"

(H2)x3 Lock Washers 1/4"

(H4)x3 Small flat washers 1/4" (12mm)

(H5)x1 Allen Wrench 1/4"

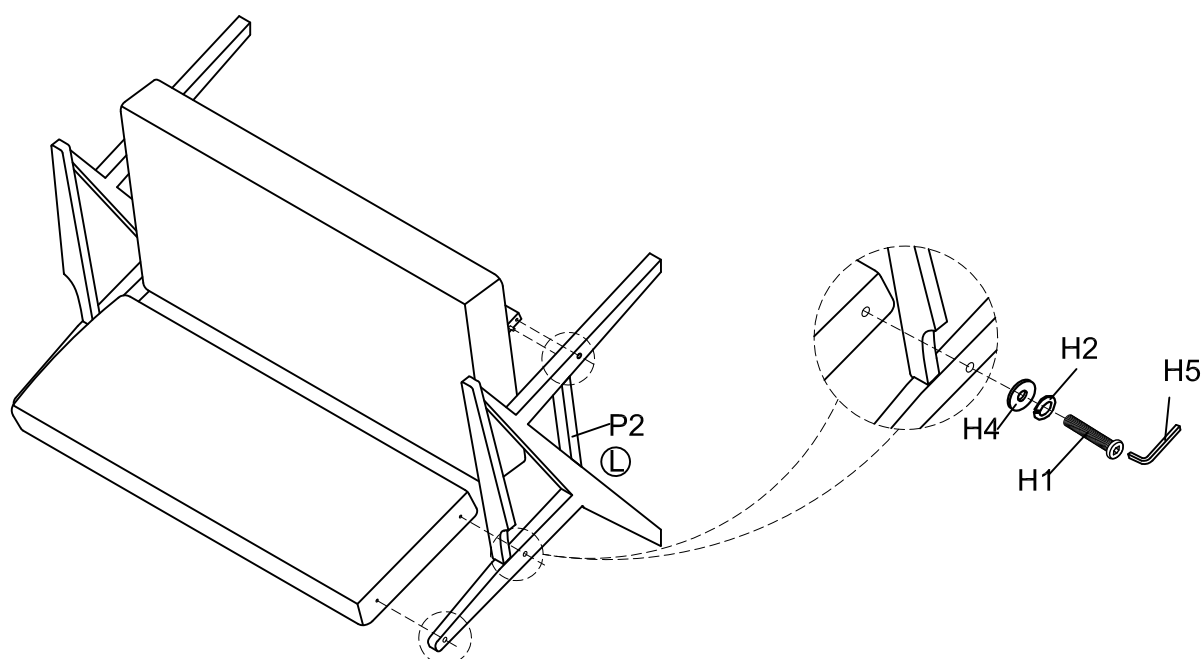

Step 4. Attach seat cushion (P3) to left arm (P2) as shown below. Loosely tighten by Allen wrench (H5).

(H1)x3 Bolts Ø1/4"x2"




(H2)x3 Lock Washers 1/4"



(H3)x3 Big flat washers 1/4" (19mm)




(H5)x1 Allen Wrench 1/4"

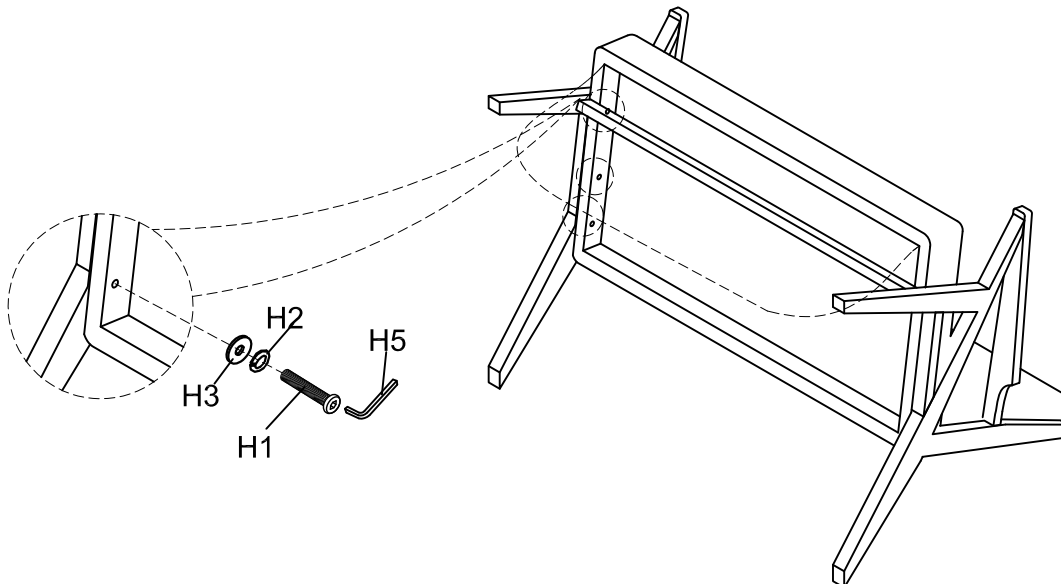

Step 5. Turn the assembled loveseat to a upright position. Securely tighten all bolts by Allen wrench (H5), but do not over tighten the bolts. Then attach wooden plug (H6) to each bolt hole, tighten with Rubber hammer to knock the wooden plug till its tighten. Note: use a soft cloth between the wooden plug and hammer to prevent damage to wooden plug finish.

(H6)x6 Wooden Plugs 

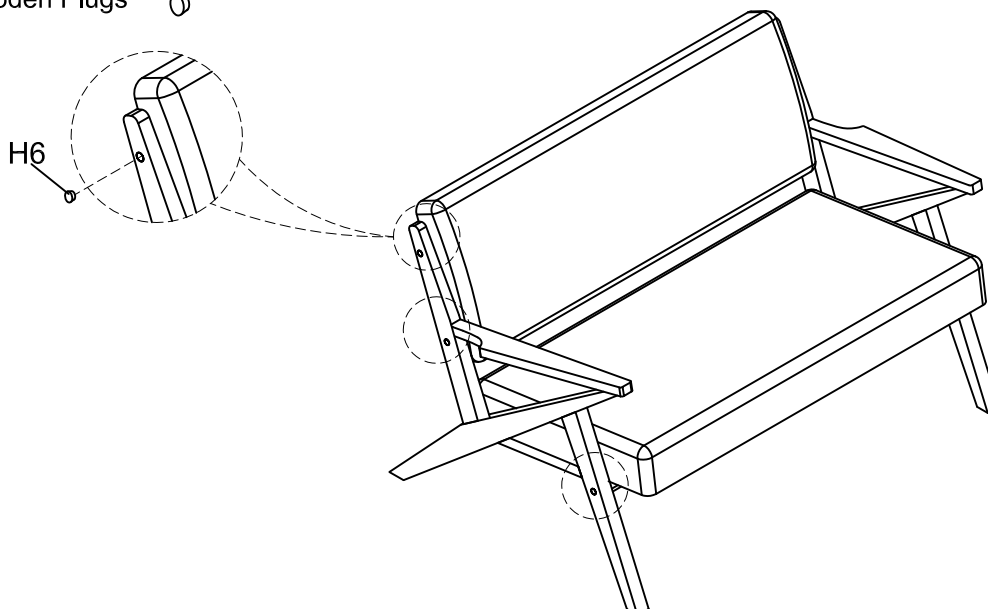

Step 6. Assembly are complete. Failure to follow these instructions may cause the bolts to misalign during assembly.

ADDITIONAL NOTE ABOUT SAFETY:

BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE.

THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.

Thank you for you purchase