

MONTEREY MIRROR

Assembly instructions:

PARTS LIST

No.	DESCRIPTION	IMAGE	QTY
P1	DRESSER		1
P2	MIRROR		1
P3	SUPPORT BARS		2
P4	LONG WALL HANGING BAR		1
P5	SHORT WALL HANGING BAR		1

HARDWARE LIST


No.	DESCRIPTION	IMAGE	QTY
H1	BOLT Ø6x40		8
H2	FLAT WASHER Ø6x18		8
H3	SPRING WASHER Ø6x14		8
H4	ALLEN KEY		1

**NOTE:** PO# is located underneath/ inside of each item. Please be prepared to provide this # should any claim be necessary.

**CAUTION:** Item is heavy assembly should be performed by two people.

**Estimate assembly time: 1,5 minutes**

Option 1

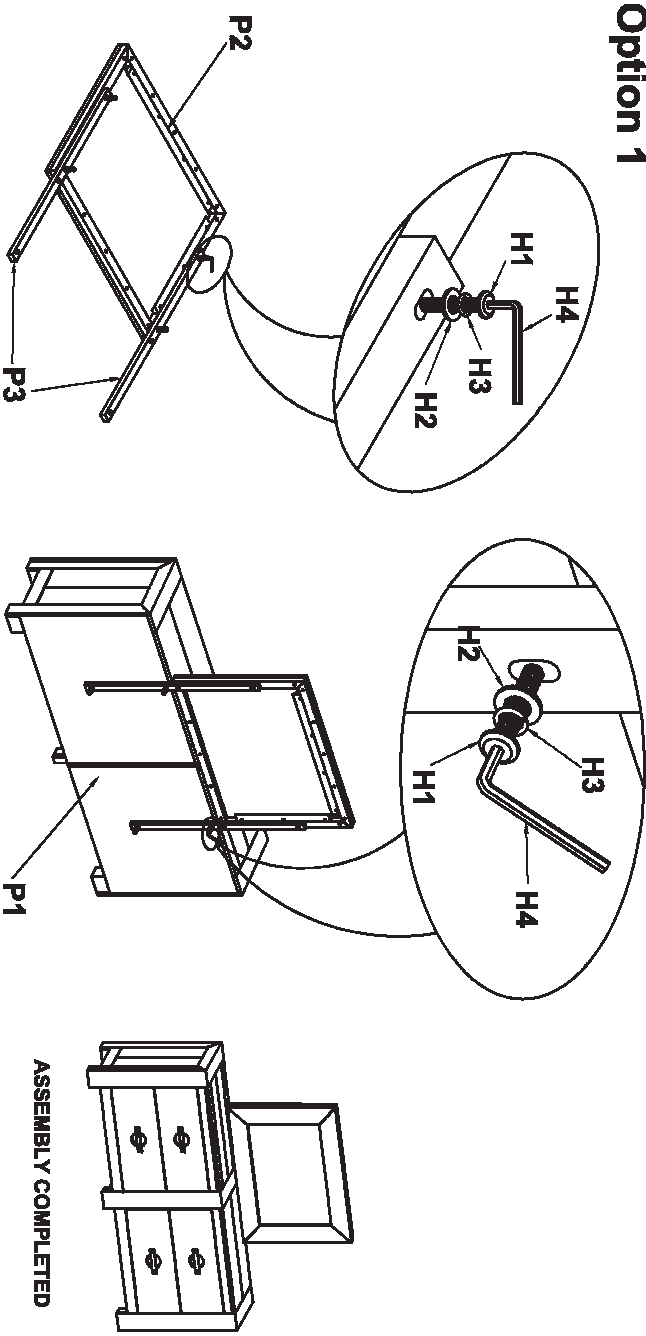

Option 2

