
ASSEMBLY INSTRUCTION 91-0376 CHAIR


PARTS LIST							
PARTS#	Description	Pattern	Q' ty	PARTS#	Description	Pattern	Q' ty
A	Bolt DiaØ1/4"+2"	()accommo	12PCS	K	Lock Washer Ø1/4**12mm	0	12PCS
В	Bolt DiaØ5/16"*2"	(ummma)	4PCS	L	Chair Back		1PC
C	Flat Washer Ø5/16**19mm	0	4PCS	M	Left side frame		1PC
D	Lock Washer Ø5/16**12mm	0	4PCS	N	Right side frame		1PC
E	Wood Screw (#8*5/8")	Dillin-	8PCS	0	Front rail		1PC
F	Allen Wrench 4mm		1PC	P	Bottom rail		1PC
G	Wood Plug Ø20mm		2PCS	Q	Rocker runner		2PCS
H	Wood Plug Ø14mm		1 OPCS	R	Seat cushion		1PC
I	L bracket		4PCS	S	Allen Wrench 5mm		1PC
J	Flat Washer Ø1/4**16mm	0	2PCS				

STEP 1.

Remove all parts from carton and separate them into part number groups as indicated on the parts list. Loosely tighen all bolts until instructed to fully tighten at the end of step 5.Attach bottom rail(P)to side frame(M+N)using bolts,Lock washer washers(A+K)with allen wrench(F)for both L&R side, Don't tighten yet.

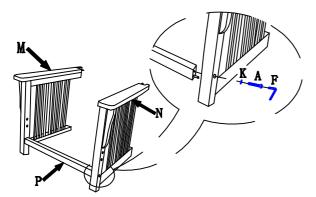


STEP 3.
Assemble side frame(M+N)to chair back(L)using bolts,lock washer(A+K)and flat washer(A+K+J) with allen wrench(F)for both L&R side.Don't tighten yet.

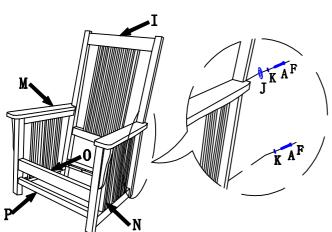

STEP 2.

Attach front rail(O)to side frame(M+N)using bolts,lock washers(A+K)with allen wrench(F)for both L&R side, Don't tighten yet.

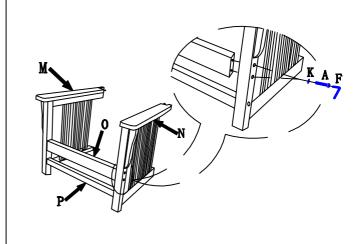

STEP 4.