



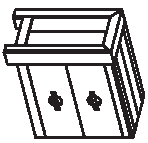

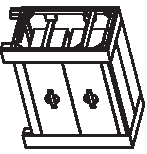

MONTEREY DRESSER

Assembly instructions:

PARTS LIST

No.	DESCRIPTION	IMAGE	QTY
P1	DRESSER (PART A)		1
P2	DRESSER (PART B)		1



HARDWARE LIST

No.	DESCRIPTION	IMAGE	QTY
H1	BOLT Ø8x50		2
H2	SPRING WASHER Ø8x22		2
H3	FLAT WASHER Ø8x15		2
H4	ALLEN KEY		1

NOTE: PO# is located underneath/ inside of each item. Please be prepared to provide this # should any claim be necessary.

CAUTION: Item is heavy assembly should be performed by two people.

Estimate assembly time: 1,5 minutes

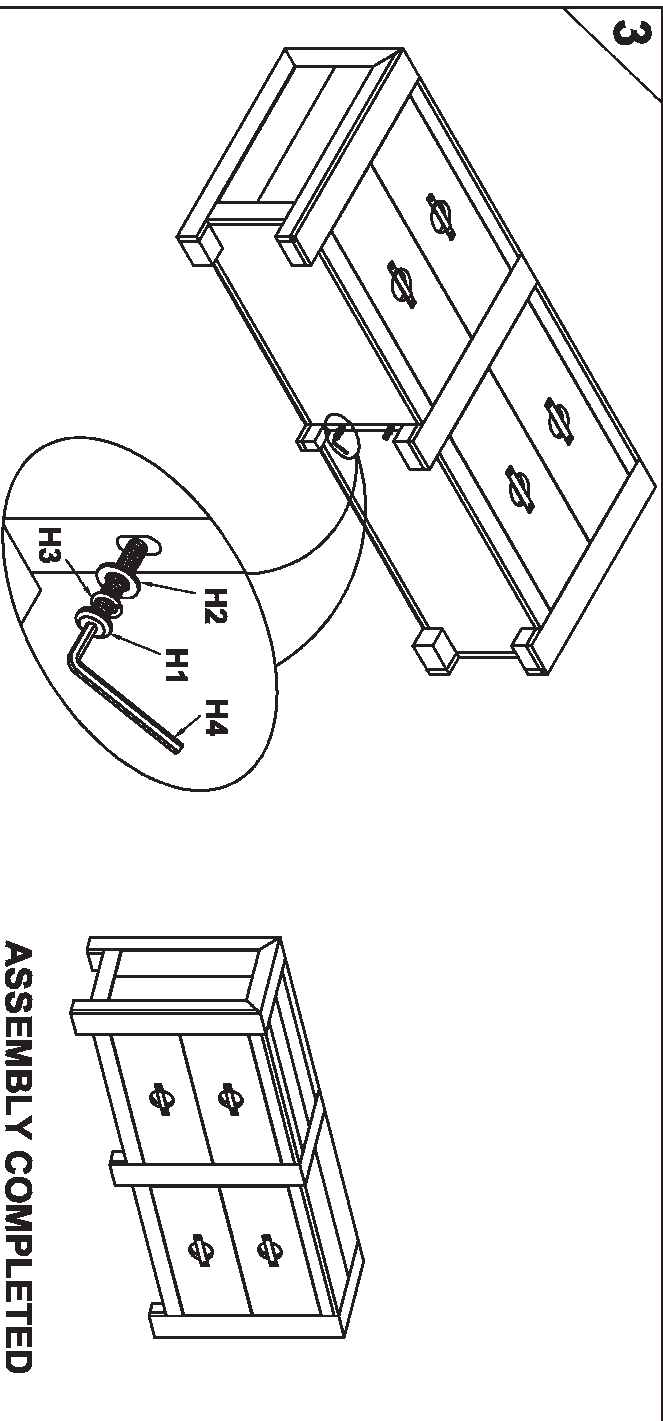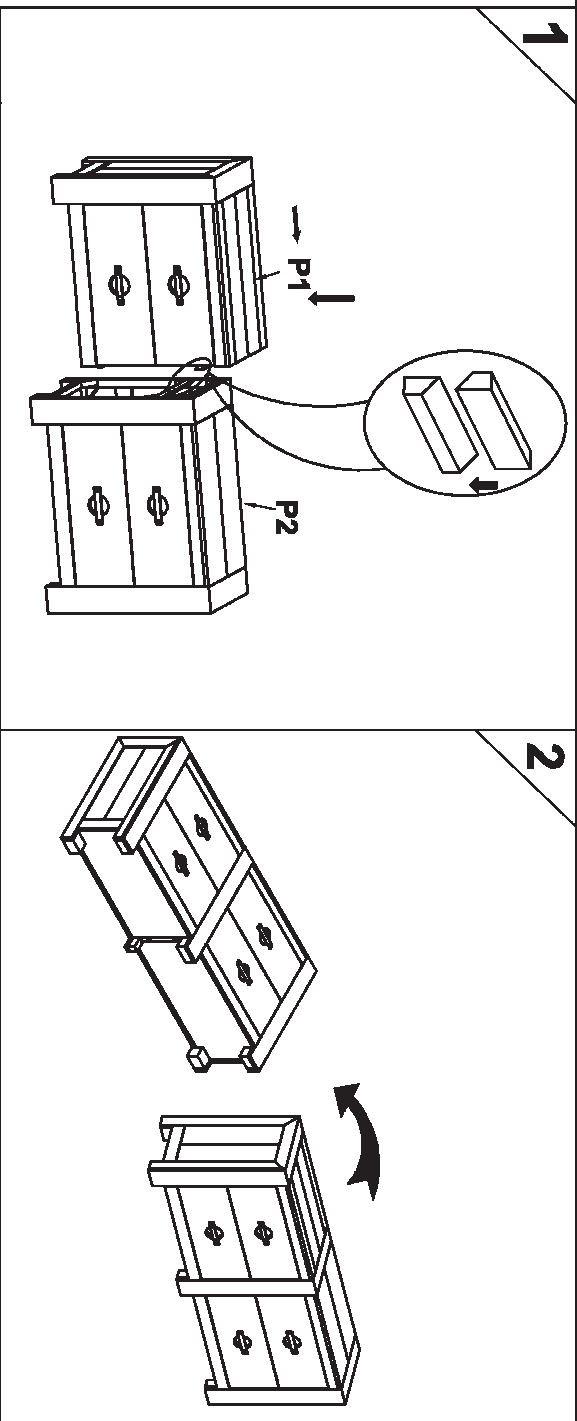

ASSEMBLY COMPLETED