


# ASSEMBLY INSTRUCTIONS

## BOOMERANG COUNTER STOOL

INK+IVY

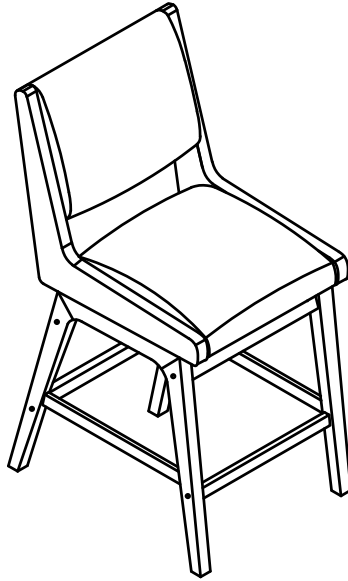




SCAN QR CODE FOR  
ASSEMBLY VIDEO

### Please read below before assembly:


- Assemble the product on a flat, soft surface such as a carpet or cloth to prevent scratching the finish.
- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.
- Failure to follow these instructions may cause the bolts to misalign during assembly.

### DISCLAIMERS:








- WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.
- BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTEN AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.

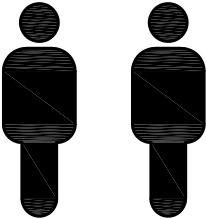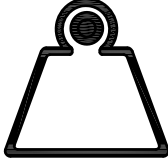
 PEOPLE NEEDED	 300 lbs seat WEIGHT LIMIT	 ESTIMATED TIME
--	--	---

### TOOLS REQUIRED (NOT INCLUDED)





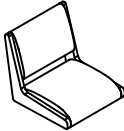

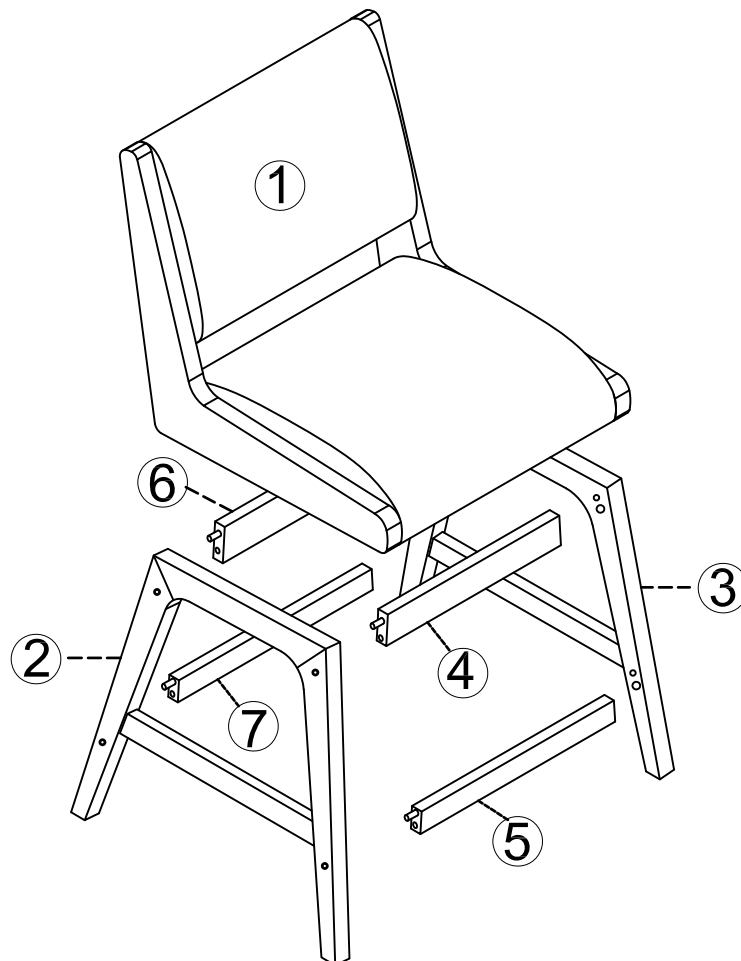
 RUBBER Mallet
--

# PARTS LIST

①	CHAIR TOP		1 PC
②	LEFT LEG		1 PC
③	RIGHT LEG		1 PC
④	FRONT TOP RAIL		1 PC
⑤	FRONT STRETCHER		1 PC
⑥	BACK TOP RAIL		1 PC
⑦	BACK STRETCHER		1 PC




# HARDWARE LIST





A	SHORT BOLT - Ø 1/4" x 1-1/2"		8 PCS
B	LONG BOLT - Ø 1/4" x 2-1/4"		4 PCS
C	LOCK WASHER - Ø1/4"		12 PCS
D	SMALL FLAT WASHER - Ø1/4"		8 PCS
E	LARGE FLAT WASHER- Ø1/4"		4 PCS
F	ALLEN KEY - 1/4"		1 PC
G	WOOD PLUG		8 PCS

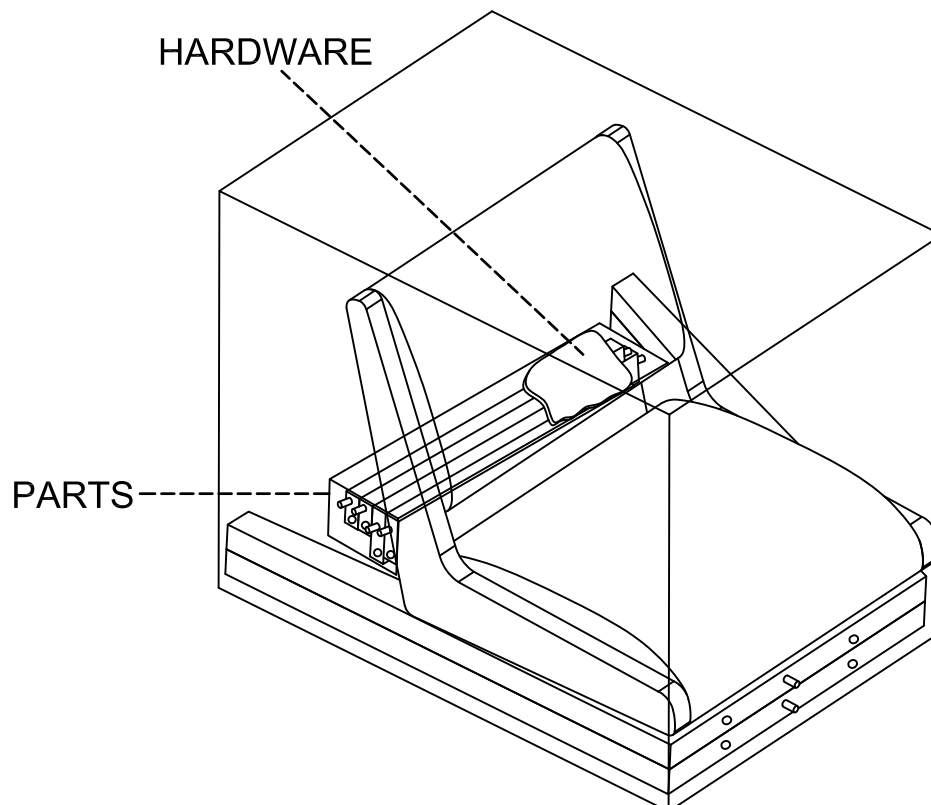
## STEP 1

LOCATE PARTS AND HARDWARE PER BELOW DRAWING.





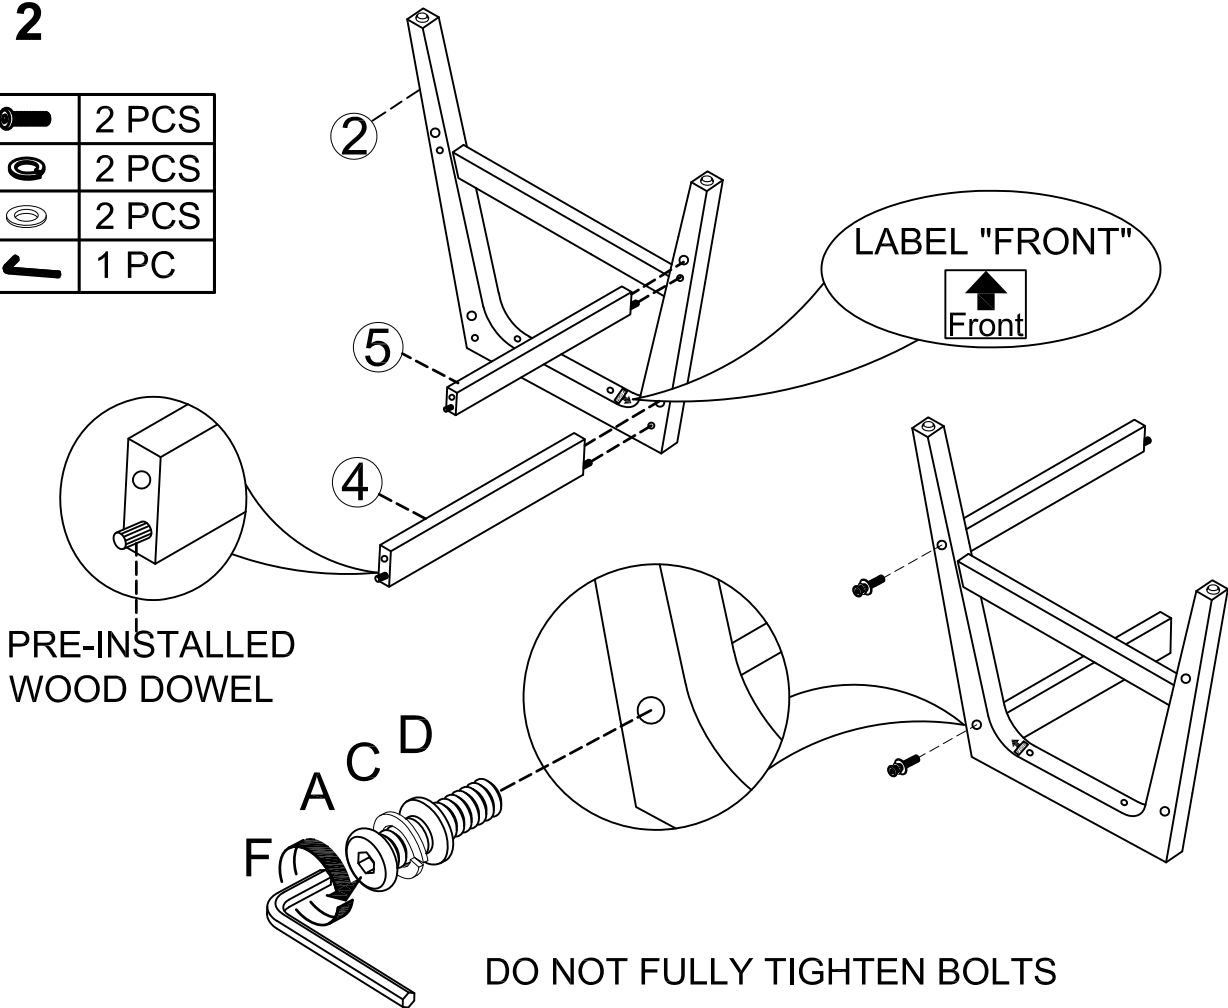


STEP 2

A		2 PCS
C		2 PCS
D		2 PCS
F		1 PC





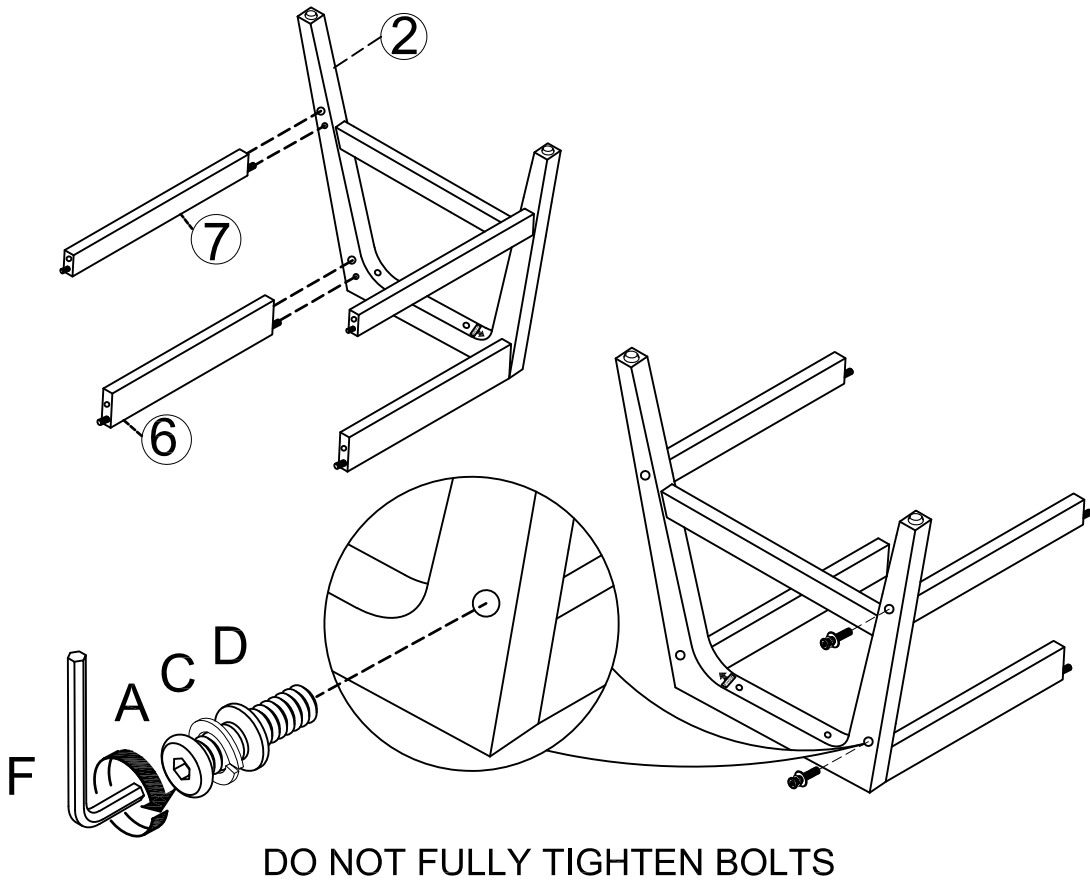

STEP 3



A		2 PCS
C		2 PCS
D		2 PCS
F		1 PC







STEP 4

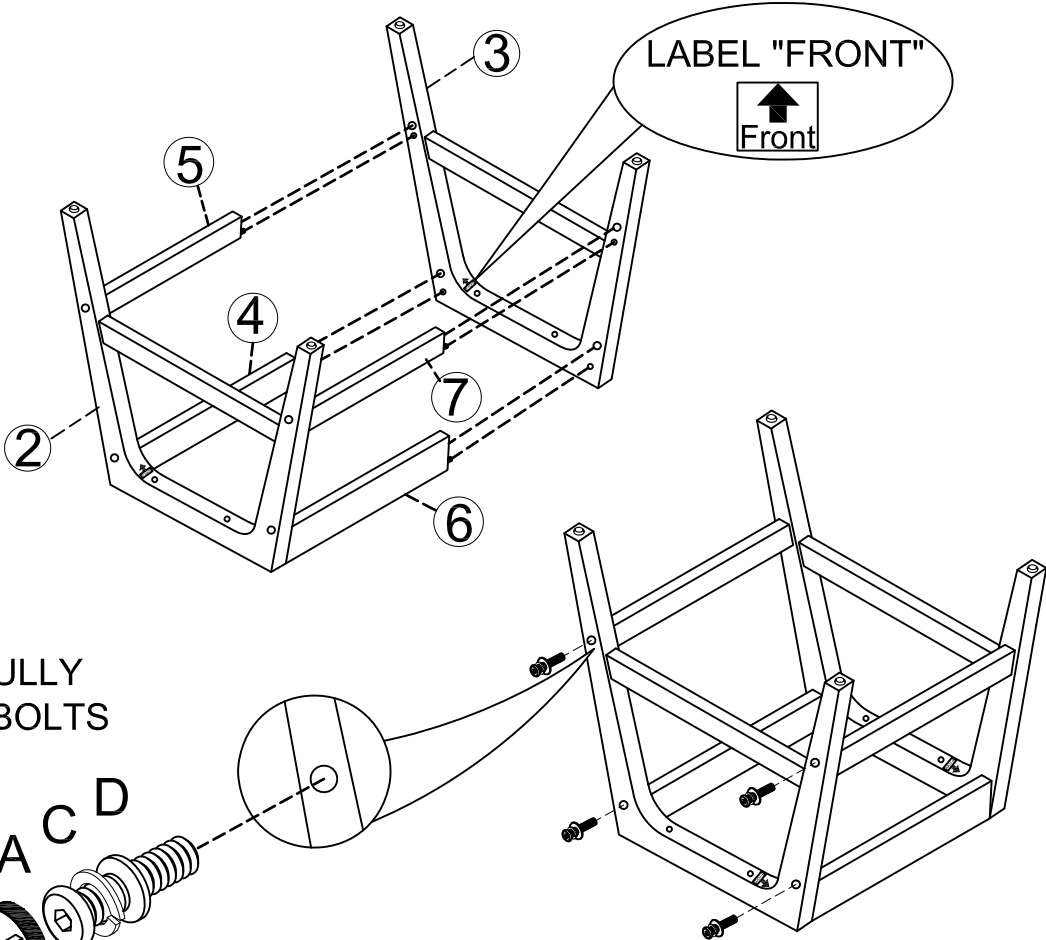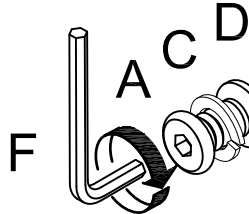A		4 PCS
C		4 PCS
D		4 PCS
F		1 PC


DO NOT FULLY  
TIGHTEN BOLTS



STEP 5

B		4 PCS
C		4 PCS
E		4 PCS
F		1 PC


PRE-INSTALLED  
WOOD DOWEL

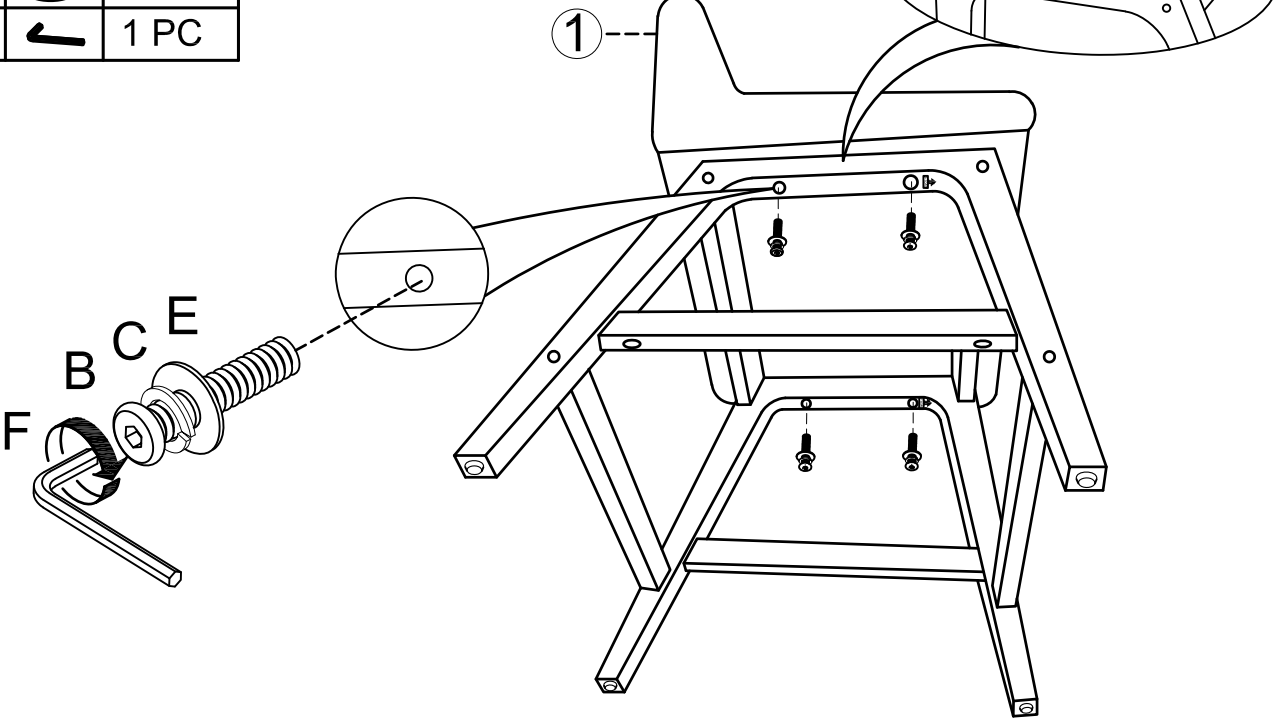


## STEP 6

G	Ø	8 PCS
---	---	-------

ENSURE STOOL IS LEVELED.  
TIGHTEN ALL BOLTS.  
INSERT WOOD PLUGS.

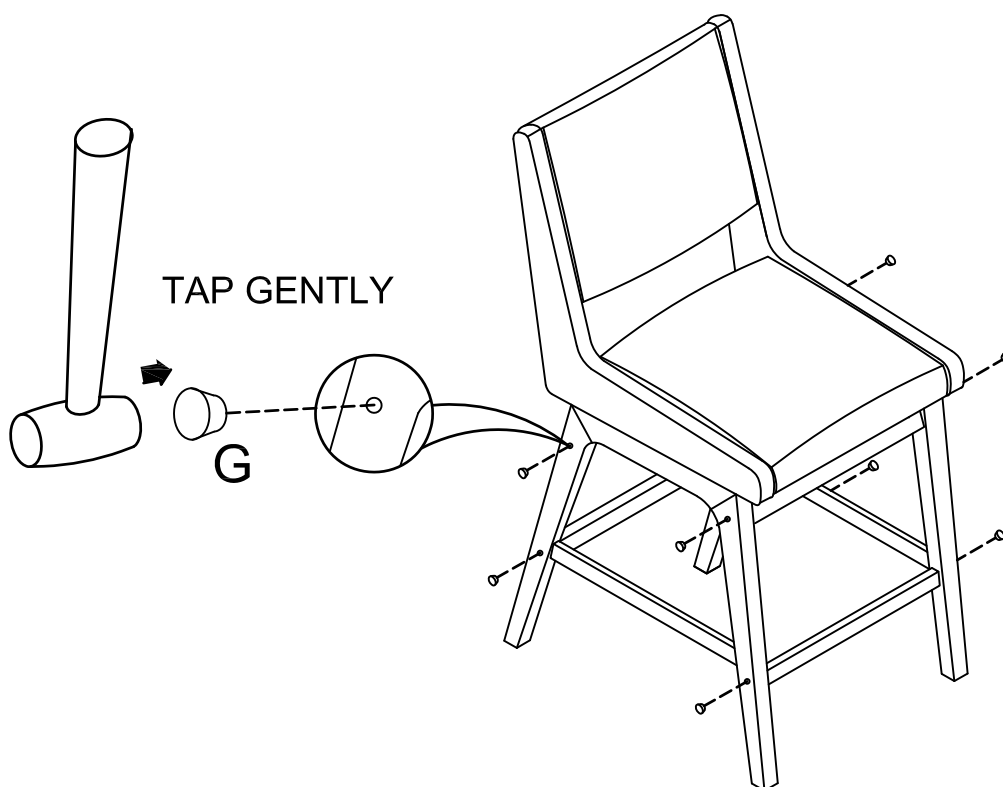

## STEP 7

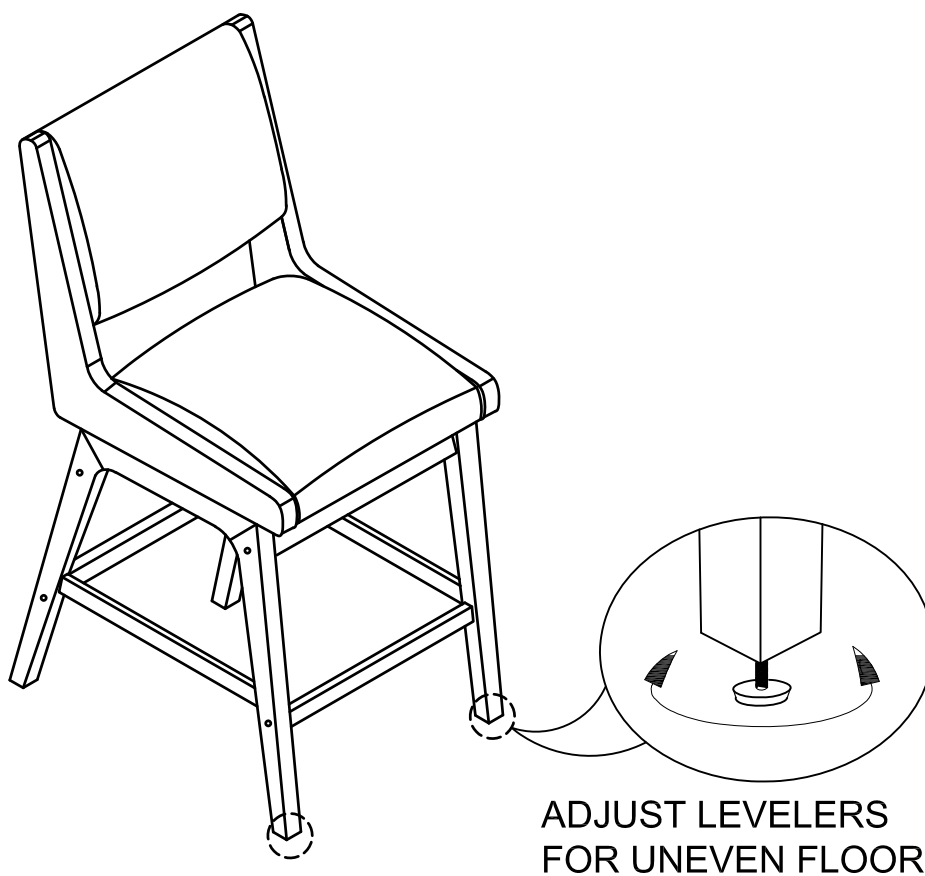

# Care & Maintenance

---

## Do...



Wipe up spills immediately.



Dust and pick-up spills using a clean, non-colored, lint-free, dry cloth.



Use mild non-abrasive soap and water.

---


## Don't...



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Do not place furniture in direct sunlight.



Do not place furniture near heating or cooling vents.



Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside. For indoor use only.