


ASSEMBLY INSTRUCTIONS

TEAGAN END TABLE


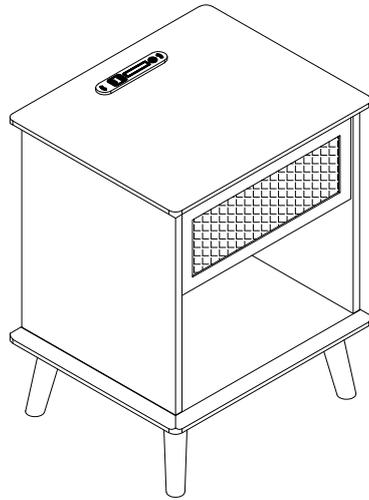


Please read below before assembly:

- Assemble the product on a flat, soft surface such as a carpet or cloth to prevent scratching the finish.
- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.
- Failure to follow these instructions may cause the bolts to misalign during assembly.

DISCLAIMERS:


- WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.
- BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTEN AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.
- SET THE ELECTRIC DRILL TO A LOW TORQUE SETTING TO PREVENT PRODUCT DAMAGE.

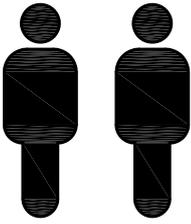 PEOPLE NEEDED	TOOLS REQUIRED (NOT INCLUDED)  PHILLIPS HEAD SCREW DRIVER	MANUAL TOOL  ESTIMATED TIME	ELECTRIC TOOL  ESTIMATED TIME
--	--	---	--

Using Camlocks

Step 1


Connect the male camlock with a piece of board.

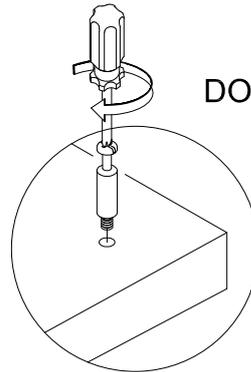

DO NOT OVER TIGHTEN.

Step 2


Insert the male camlock into the predrilled hole.

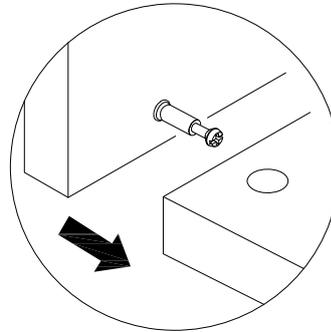

Step 3

Insert the female camlock.


Note: Ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

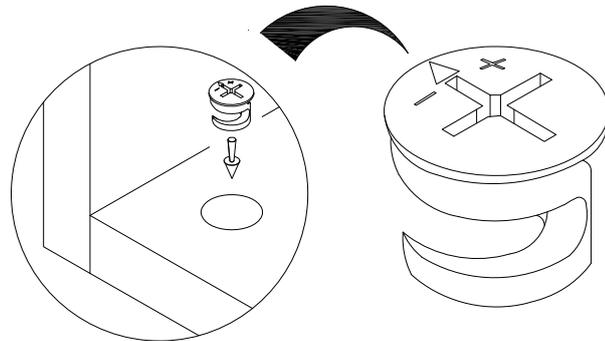





Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place, the joint is now secure.

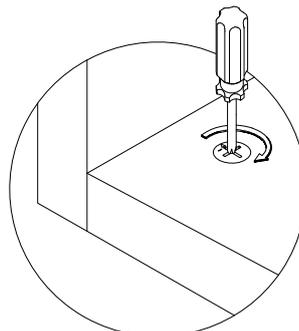


PARTS LIST

①	TABLE TOP		1 PC
②	LEFT SIDE PANEL		1 PC
③	RIGHT SIDE PANEL		1 PC
④	SHELF		1 PC
⑤	BACK PANEL		1 PC
⑥	BACK STRETCHER		1 PC
⑦	FRONT STRETCHER		1 PC
⑧	DRAWER FRONT PANEL		1 PC
⑨	LEFT DRAWER SIDE PANEL		1 PC
⑩	RIGHT DRAWER SIDE PANEL		1 PC
⑪	DRAWER BACK PANEL		1 PC
⑫	DRAWER BOTTOM PANEL		1 PC
⑬	LEG		4 PCS

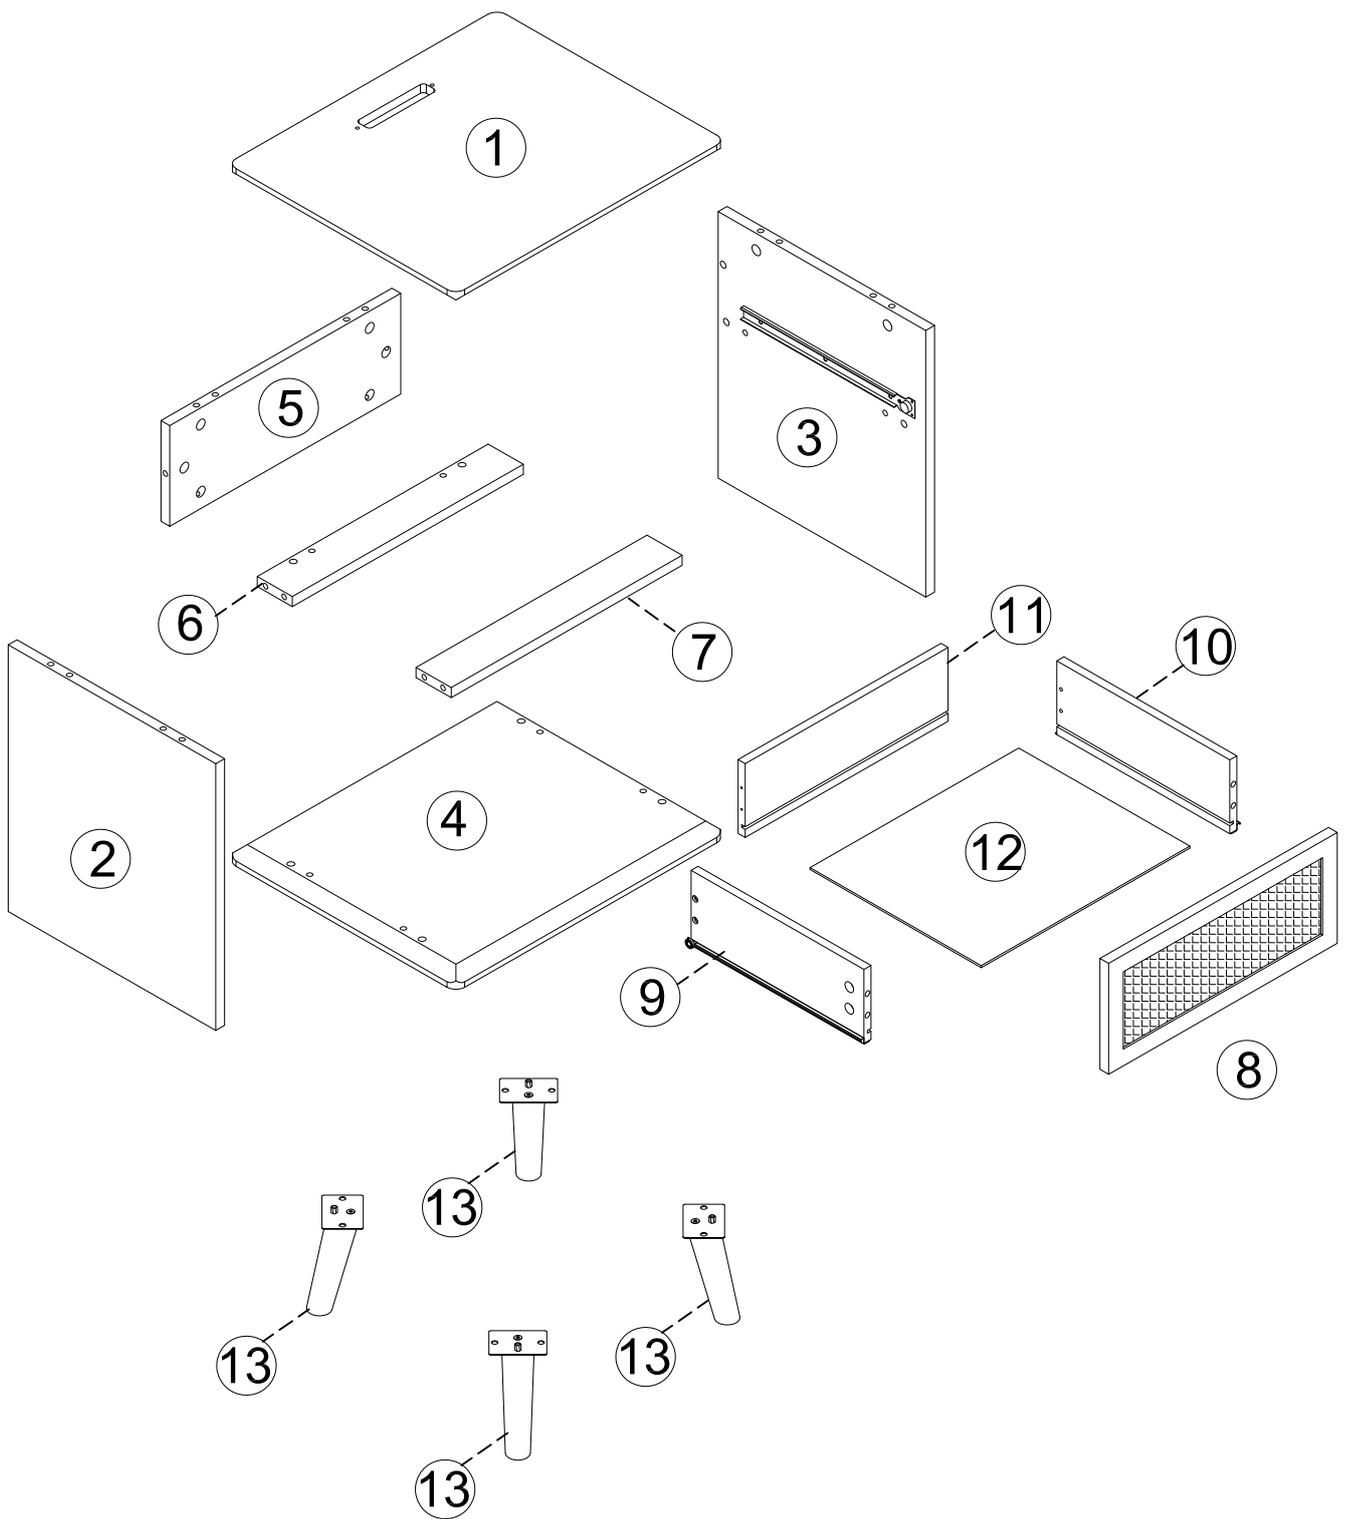


HARDWARE LIST

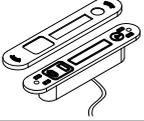A	MALE CAMLOCK - Ø1/4 " x 1"		18 PCS+3 EXTRA
B	FEMALE CAMLOCK - Ø5/8 " x 1/2"		18 PCS+3 EXTRA
C	WOOD DOWEL- Ø5/16 " x 1-3/16"		16 PCS+2 EXTRA
D	SMALL LONG SCREW - Ø1/8" x 1-3/8"		4 PCS
E	BOLT - Ø1/4" x 1/2"		8 PCS
F	ALLEN KEY - 1/4"		1 PC
G	LARGE LONG SCREW - Ø1/4" x 2"		4 PCS
H	CHARGING STATION - 6"W x 7/8"D x1"H		1 SET
I	SMALL SHORT SCREW - Ø1/8" x 1/2"		2 PCS+1 EXTRA






STEP 1

LOCATE PARTS AND HARDWARE PER BELOW DRAWING.

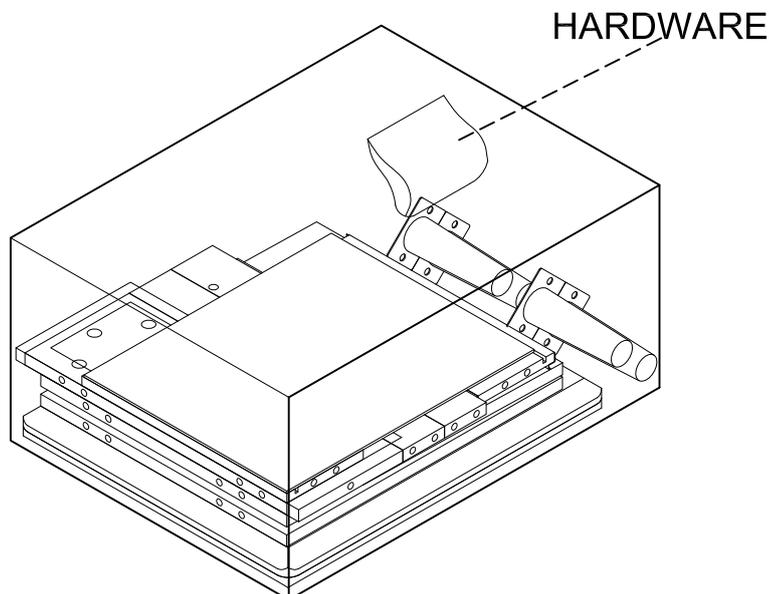


STEP 2

A		18 PCS
---	---	--------

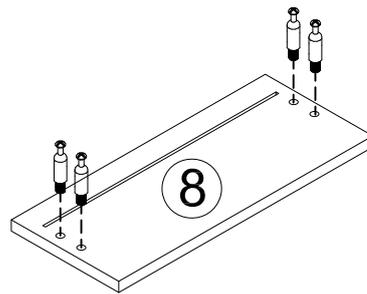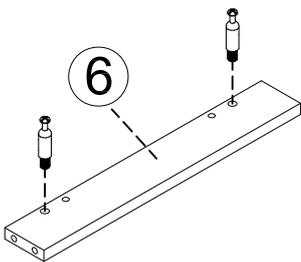
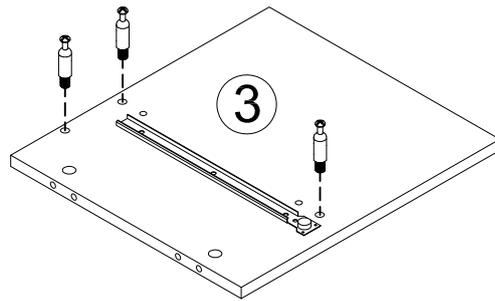
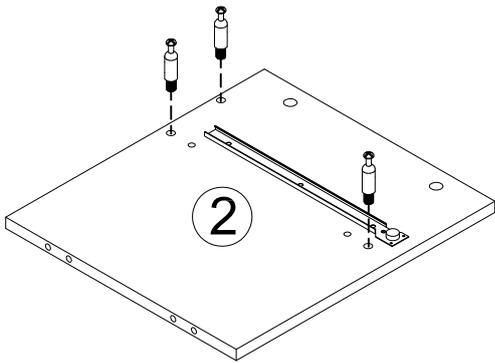
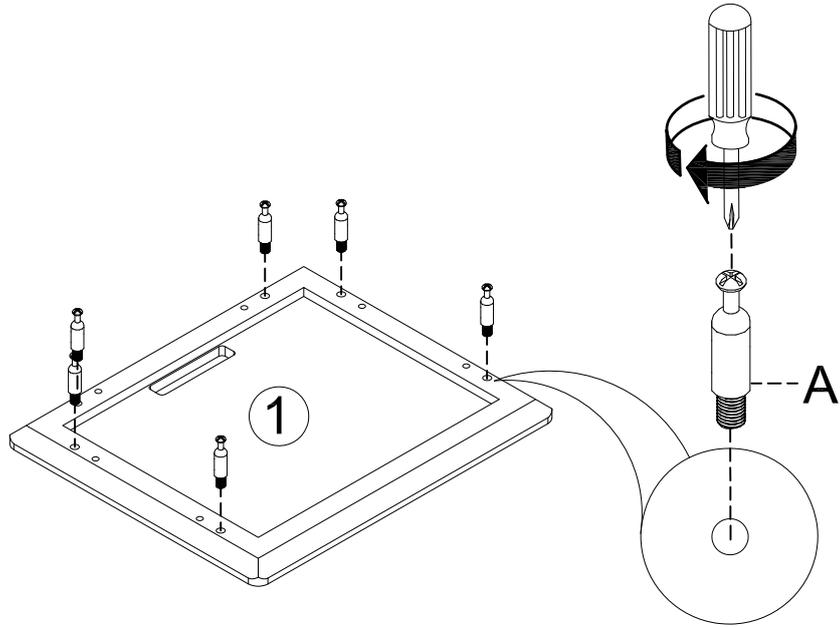


STEP 3

B		4 PCS
D		4 PCS

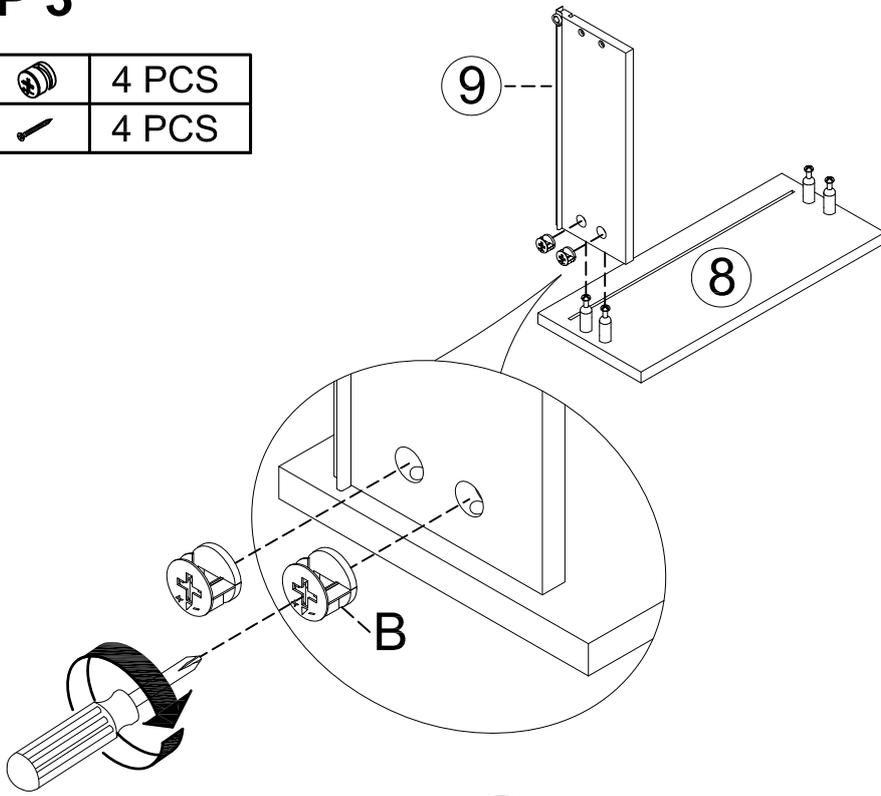


REPEAT THE ABOVE STEP FOR THE OTHER DRAWER SIDE PANEL.

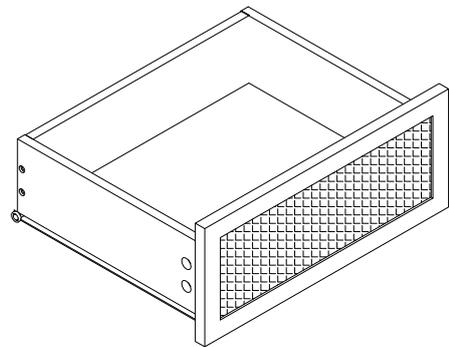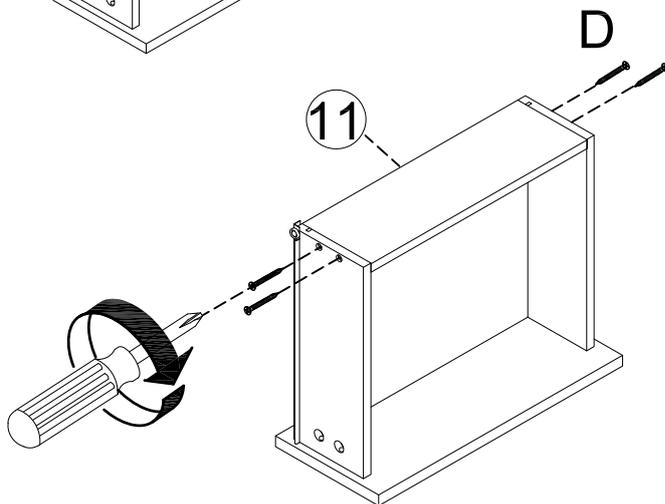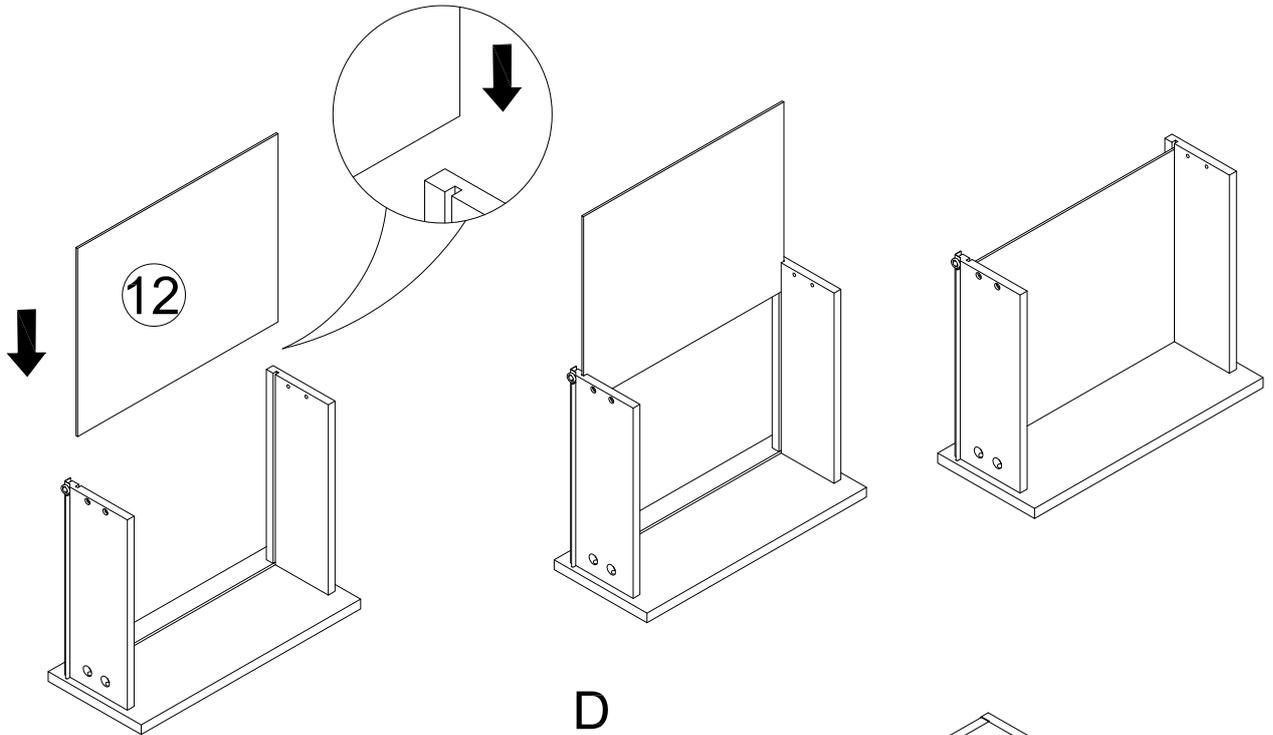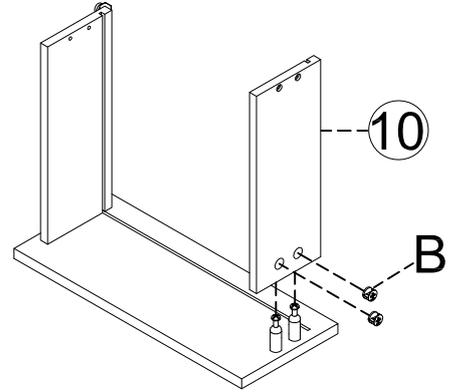


STEP 4

B		2 PCS
C		2 PCS

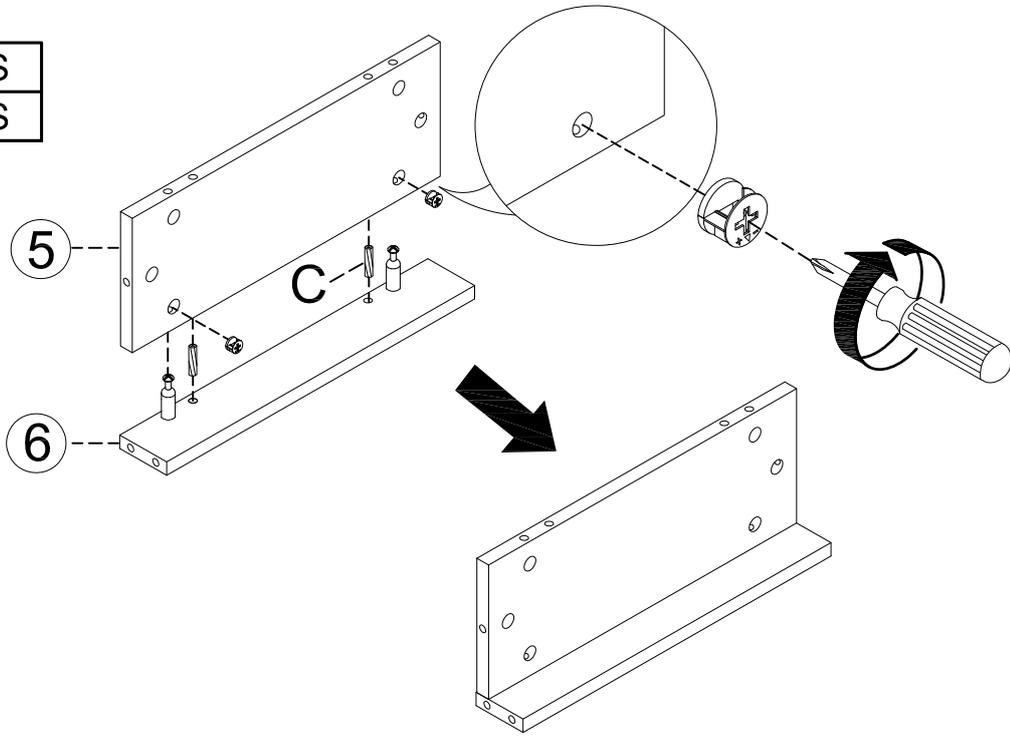


STEP 5

B		2 PCS
C		1 PC

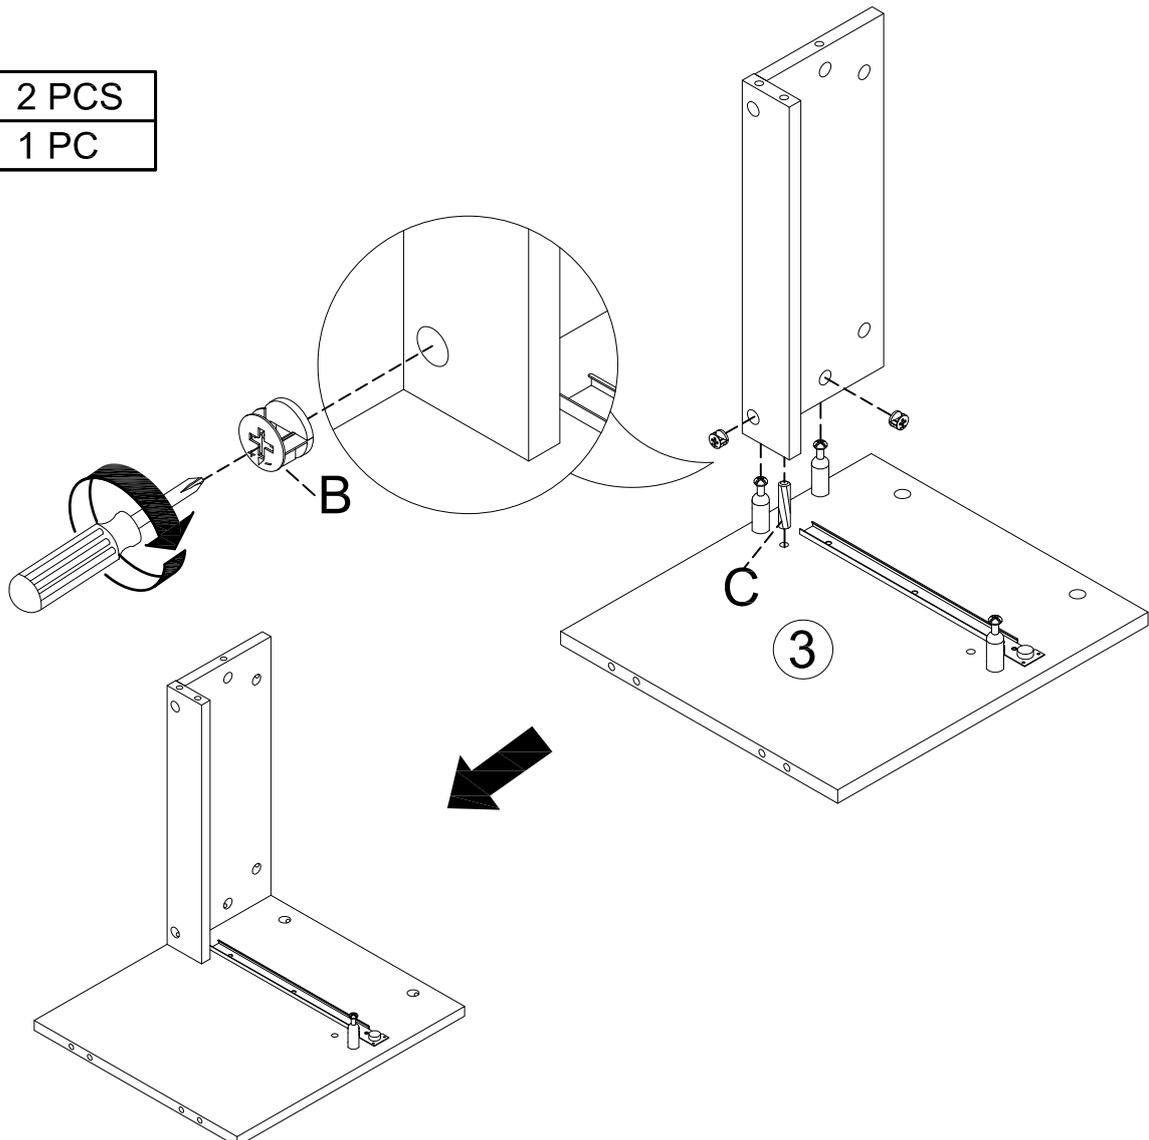


STEP 6

B		1 PC
C		1 PC

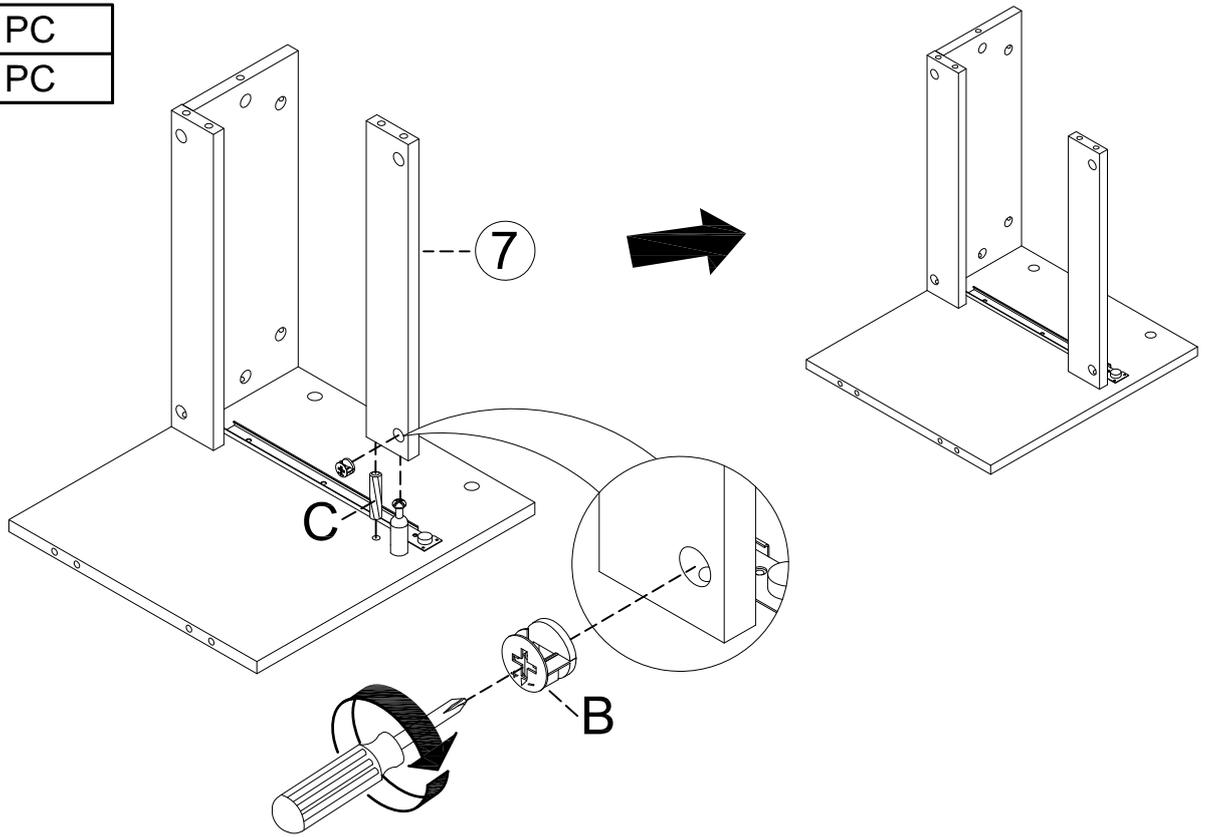





STEP 7

B		3 PCS
C		2 PCS

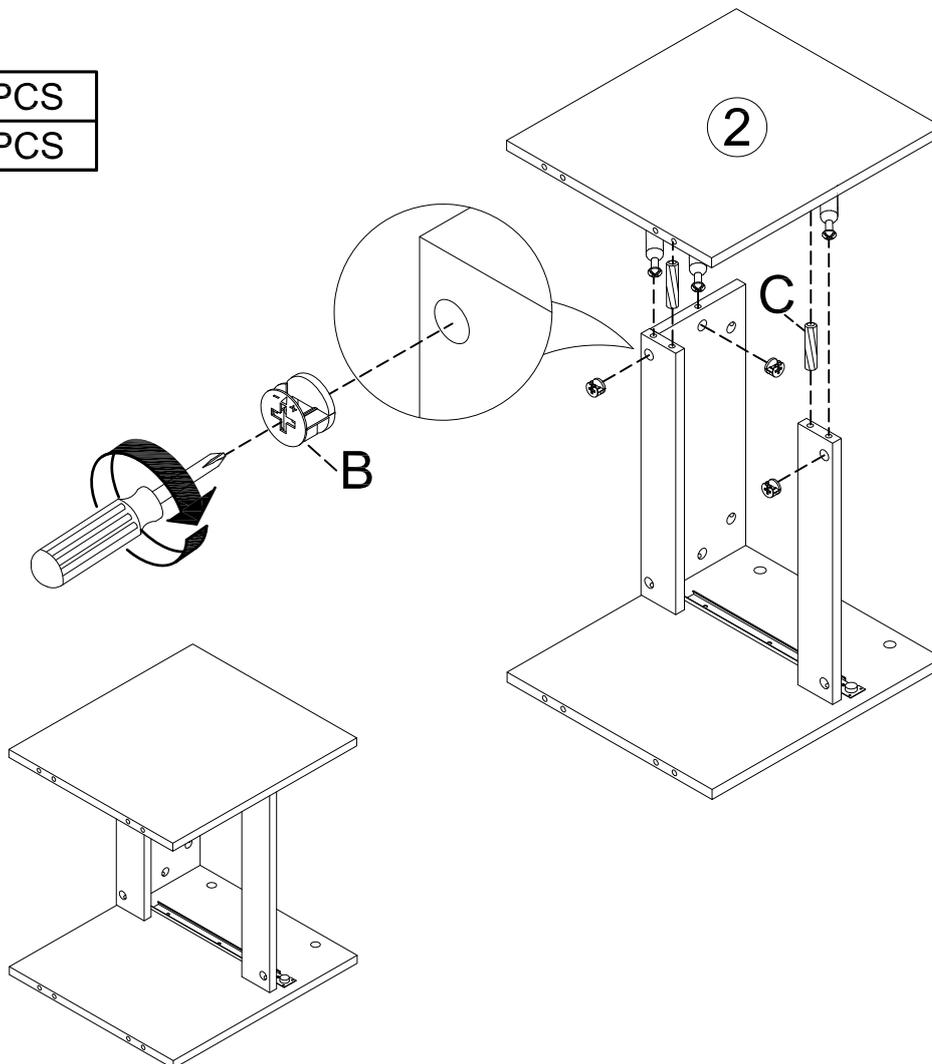


STEP 8

B		6 PCS
C		6 PCS

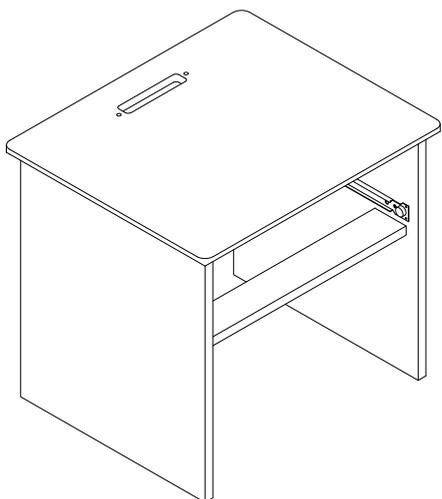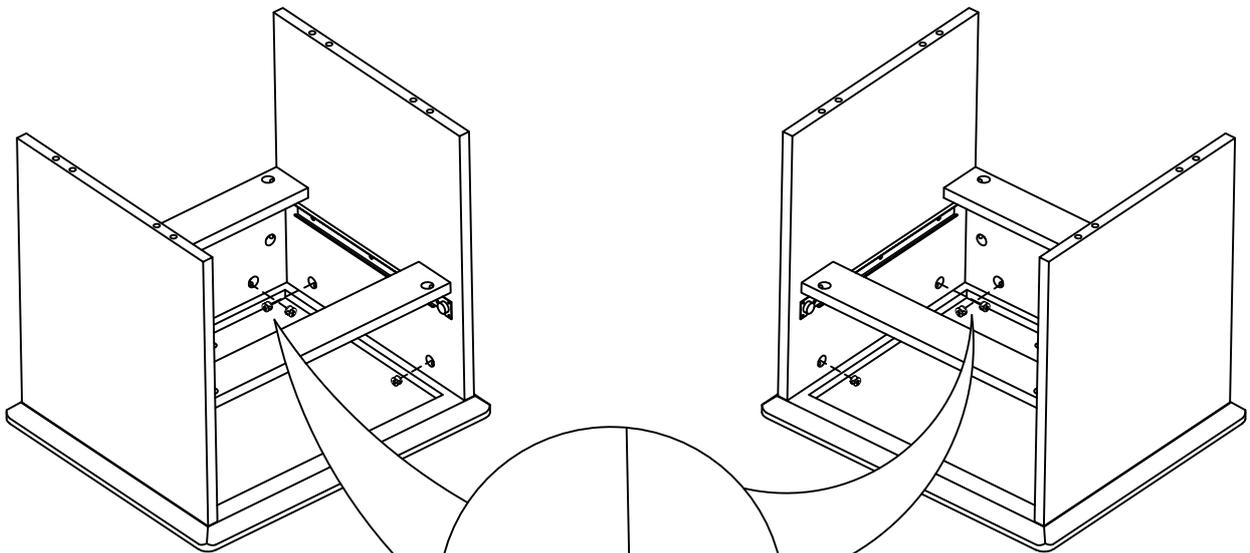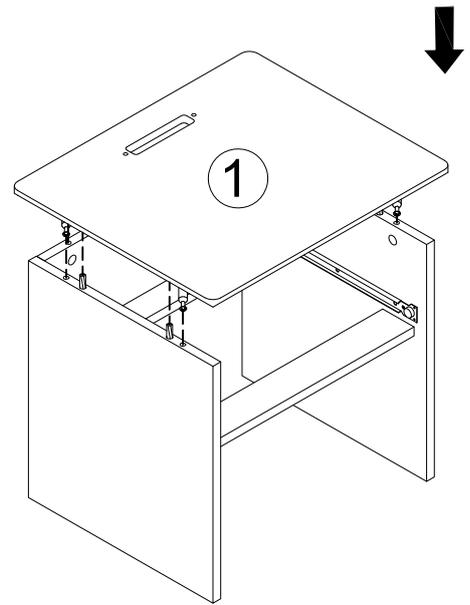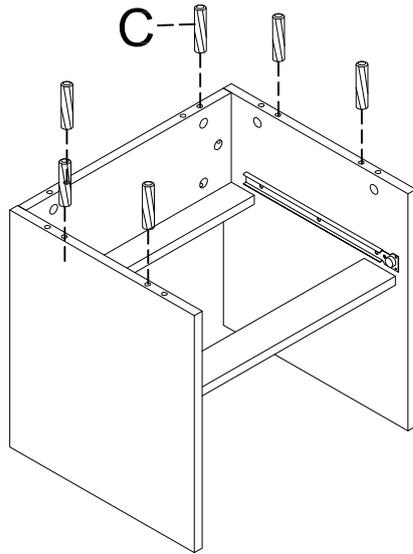


STEP 9

C		4 PCS
G		4 PCS

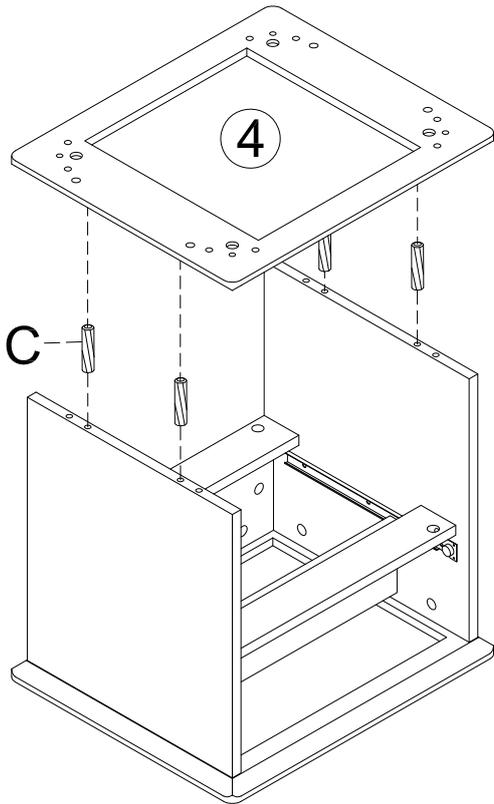


FLIP THE END TABLE
UPSIDE DOWN

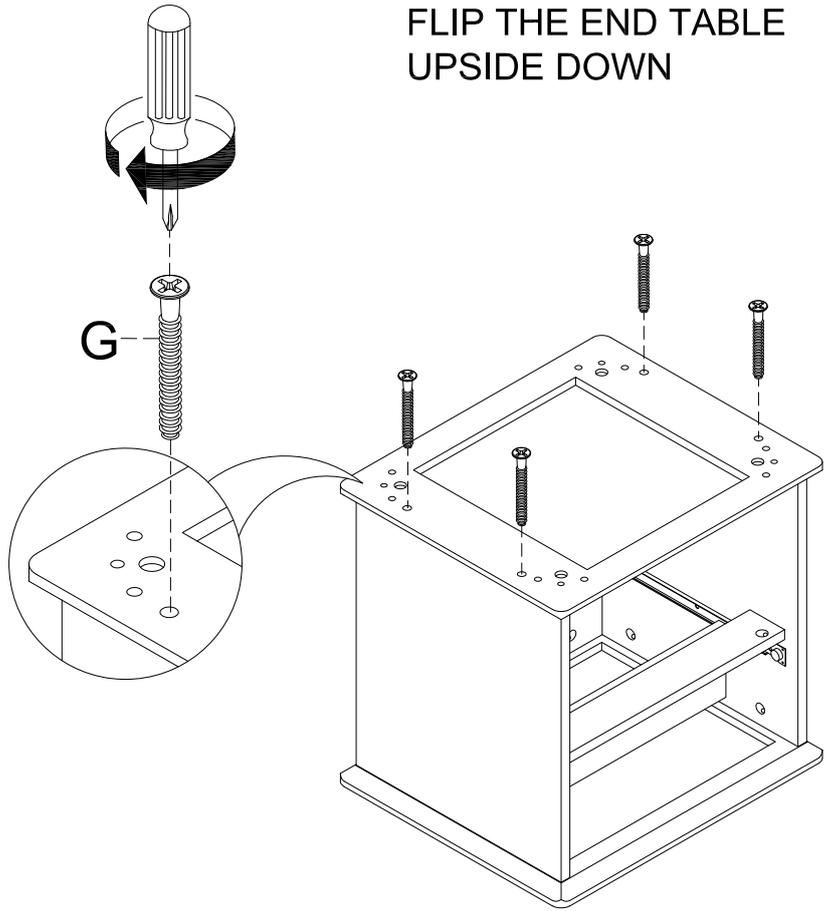


STEP 10

E		8 PCS
F		1 PC

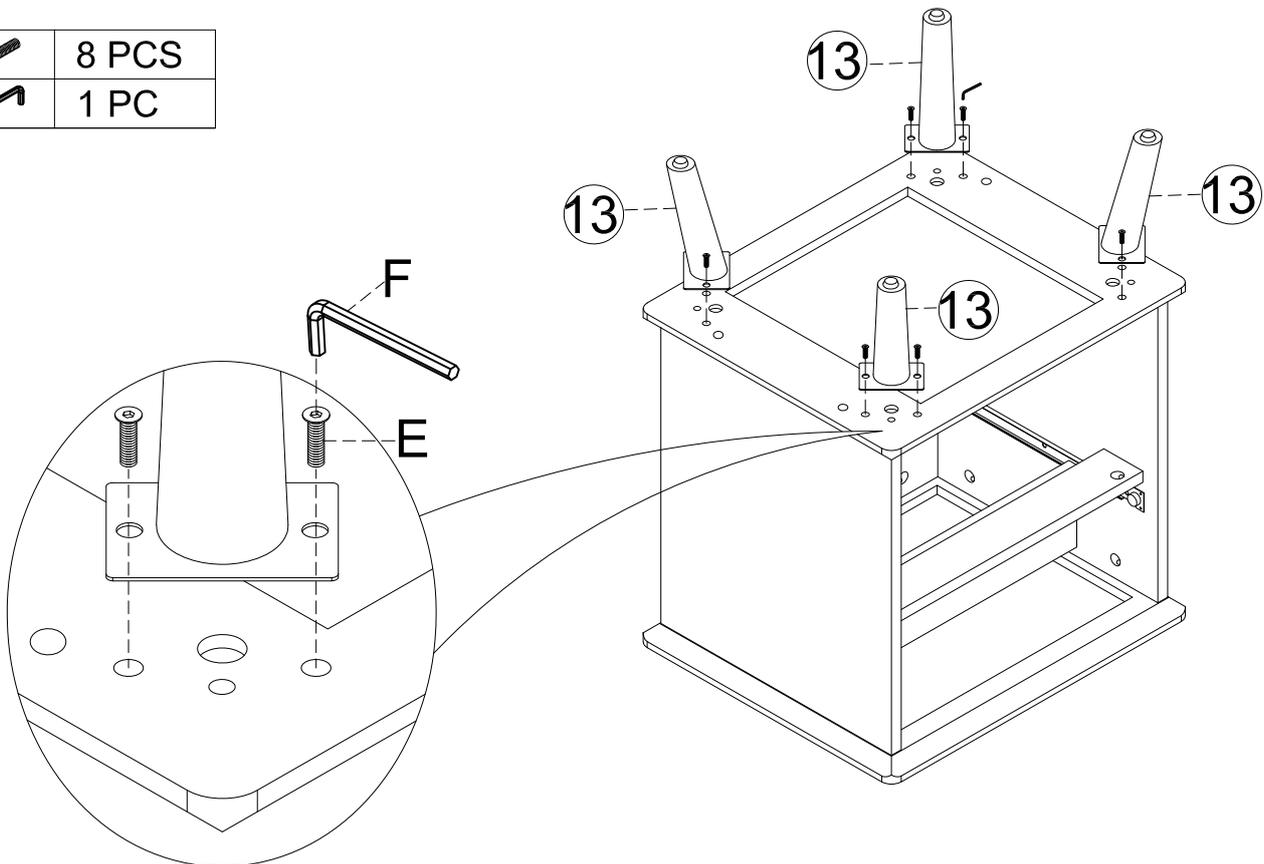


STEP 11

H		1 PC
I		2 PCS

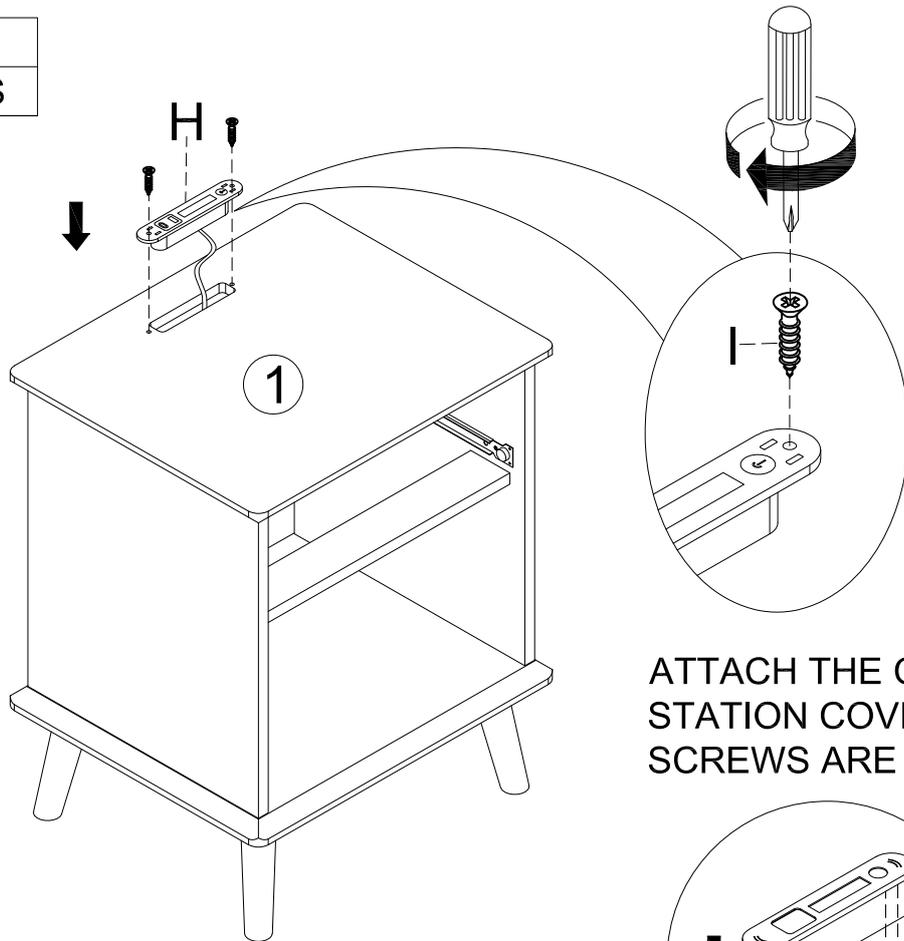

STEP 12

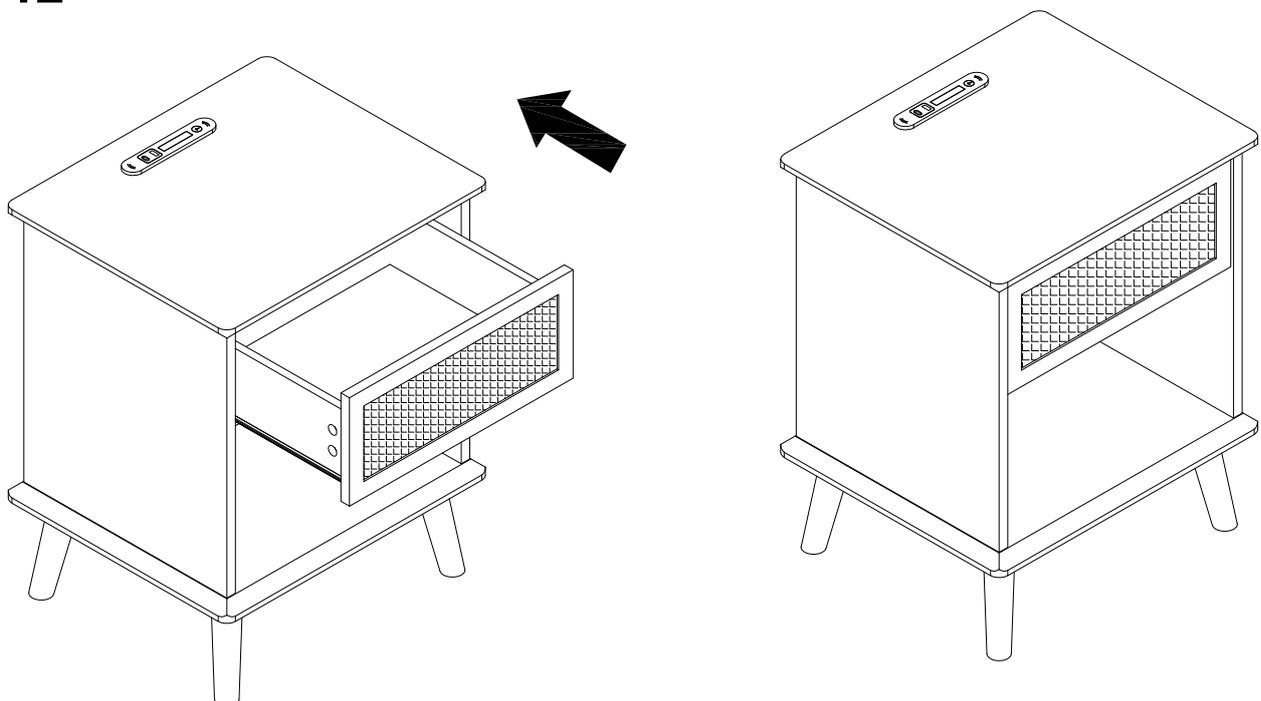

Care & Maintenance

Do...



Wipe up spills immediately.



Dust and pick-up spills using a clean, non-colored, lint-free, dry cloth.



Use mild non-abrasive soap and water.


Don't...



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Do not place furniture in direct sunlight.



Do not place furniture near heating or cooling vents.



Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside. For indoor use only.