

ASSEMBLY INSTRUCTIONS

Description: Easton Lounge


Important safety instructions:


- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

Parts List

Item	Description	QTY
P1	Back Cushion 	1
P2	Seat Cushion 	1
P3	Right Leg  (P3)	1
P4	Left Leg  (P4)	1
P5	Back Top Rail  (P5)	1
P6	Back Bottom Rail  (P6)	1

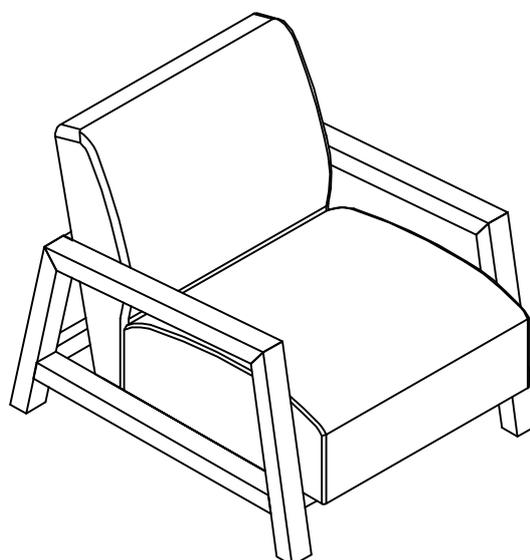

Hardware List

Item	Description	QTY
H1	Bolts Ø5/16"*1-3/4"L 	3
H2	Bolts Ø5/16" * 2"L 	4
H3	Lock Washers 5/16" 	7
H4	Flat Washers 5/16"(22mm) 	7
H5	Allen Wrench 5/16" 	1
H6	Bolts Ø1/4" * 5/8"L 	4
H7	Lock Washers 1/4" 	4
H8	Flat Washers 1/4"(16mm) 	4
H9	Allen Wrench 1/4" 	1
H10	Screw #8*1" 	1
H11	Wood Dowel 10x30mm 	4


DISCLAIMER:

WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

Assembly Procedures:


Step 1. Assemble the lounge on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Open the bottom covering of seat cushion (P2), then attach the seat cushion (P2) to the back cushion (P1) as shown below. Securely tighten all bolts with Allen wrench (H5).

- (H1)x3 Bolts $\text{Ø}5/16'' \times 1-3/4''$ 
- (H3)x3 Lock Washers $5/16''$ 
- (H4)x3 Flat Washers $5/16'' (22\text{mm})$ 
- (H5)x1 Allen Wrench $5/16''$ 

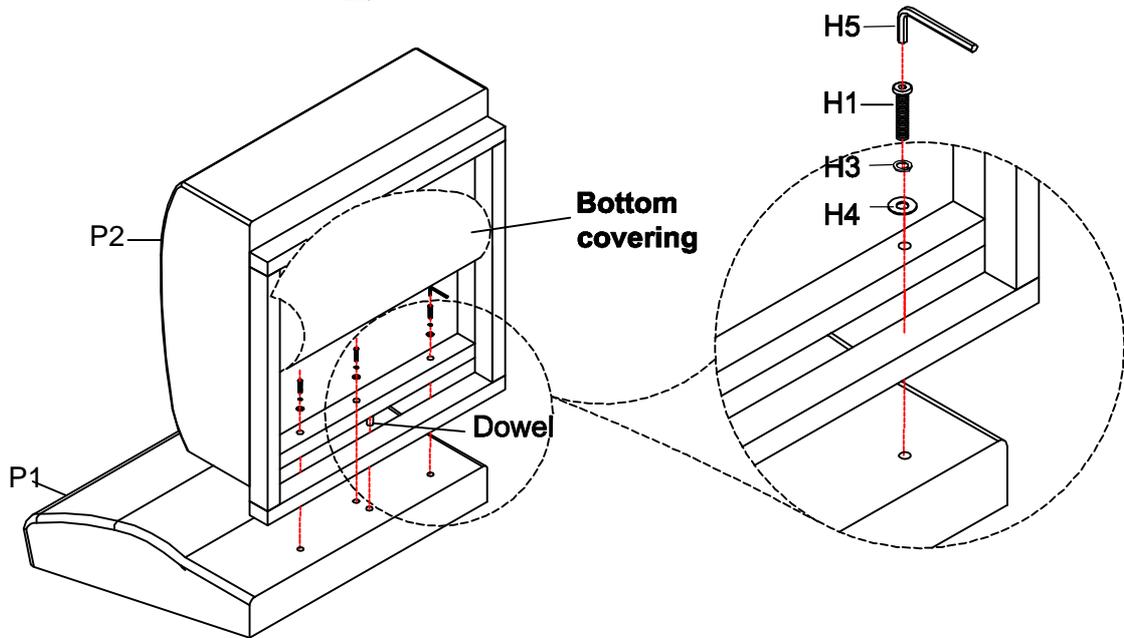

Step 2. Insert two wood dowels (k) to the seat frame as shown below, then attach left leg (P4) to the assembled back cushion (P1) and seat cushion (P2) according to the label "P4" on the left leg as shown below. Securely tighten the bolts with Allen wrench (H5).


- (H2)x2 Bolts $\text{Ø}5/16'' \times 2''$ 
- (H3)x2 Lock Washers $5/16''$ 
- (H4)x2 Flat Washers $5/16'' (22\text{mm})$ 
- (H5)x1 Allen Wrench $5/16''$ 
- (H11)x2 Wood dowel $10 \times 30\text{mm}$ 

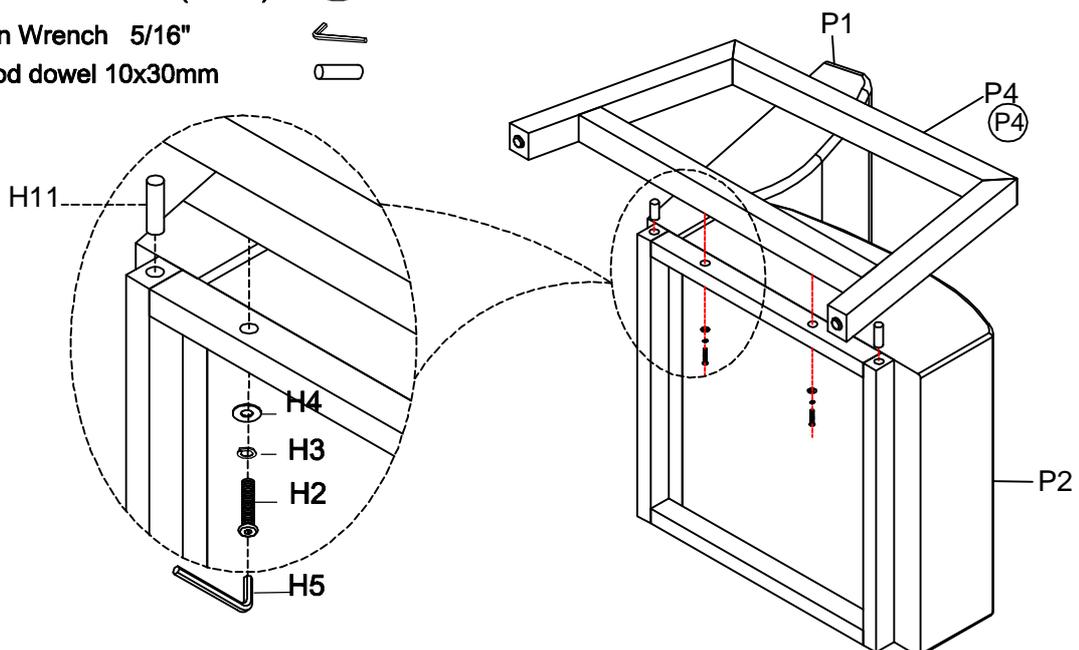

Step 3. 1) Insert back top rail (P5) and back bottom rail (P6) to the left leg (P4) according to the label "P5" and "P6" on back top rail (P5) and back bottom rail (P6).

2) Insert two wood dowels (H11) to the seat frame as shown below , then loosely attach right leg (P3) to the assembled back cushion (P1), seat cushion (P2), back top rail (P5) and back bottom rail (P6) as shown below . Securely tighten all bolts with Allen wrench (H5) .

- (H2)x2 Bolts $\text{Ø}5/16'' \times 2''$ 
- (H3)x2 Lock Washers 5/16" 
- (H4)x2 Flat Washers 5/16"(22mm) 
- (H5)x1 Allen Wrench 5/16" 
- (H11)x2 Wood dowel 10x30mm 

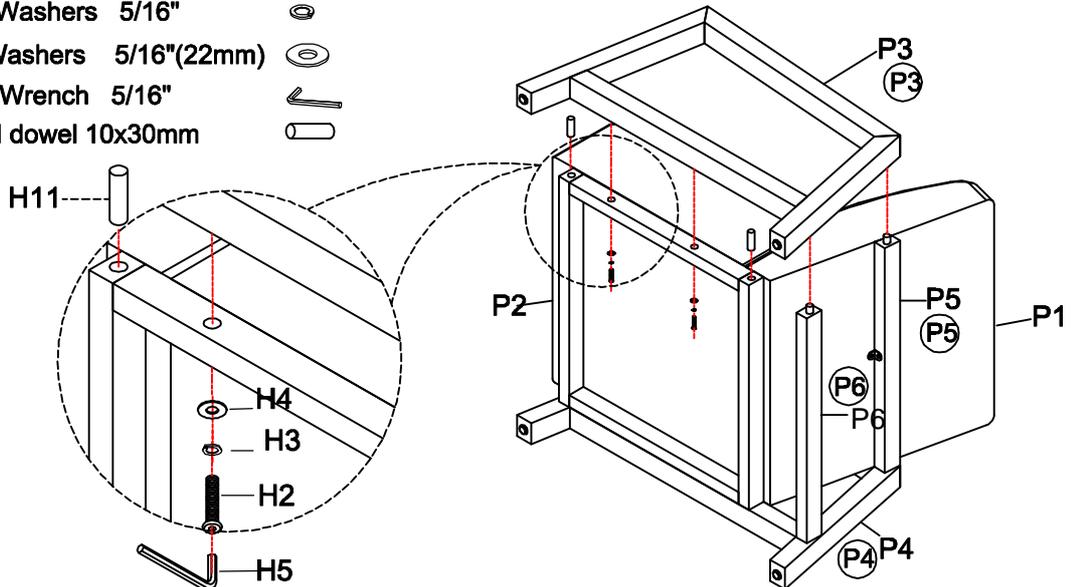


Step 4.

1) Attach "L" Brackets on the end of back top rail (P5) and back bottom rail (P6) to right leg (P3) and left leg (P4) as shown below.

2) Securely tighten the bolts with Allen wrench (H9).

3) Attach the "L" Bracket under the back top rail (P5) to the back cushion using screw (H10). Turn the assembled lounge to an upright position. Assembly is complete.

- (H6)x4 Bolts $\text{Ø}1/4'' \times 5/8''$ 
- (H7)x4 Lock Washers 1/4" 
- (H8)x4 Flat Washers 1/4"(16mm) 
- (H9)x1 Allen Wrench 1/4" 
- (H10)x1 Screw #8*1" 

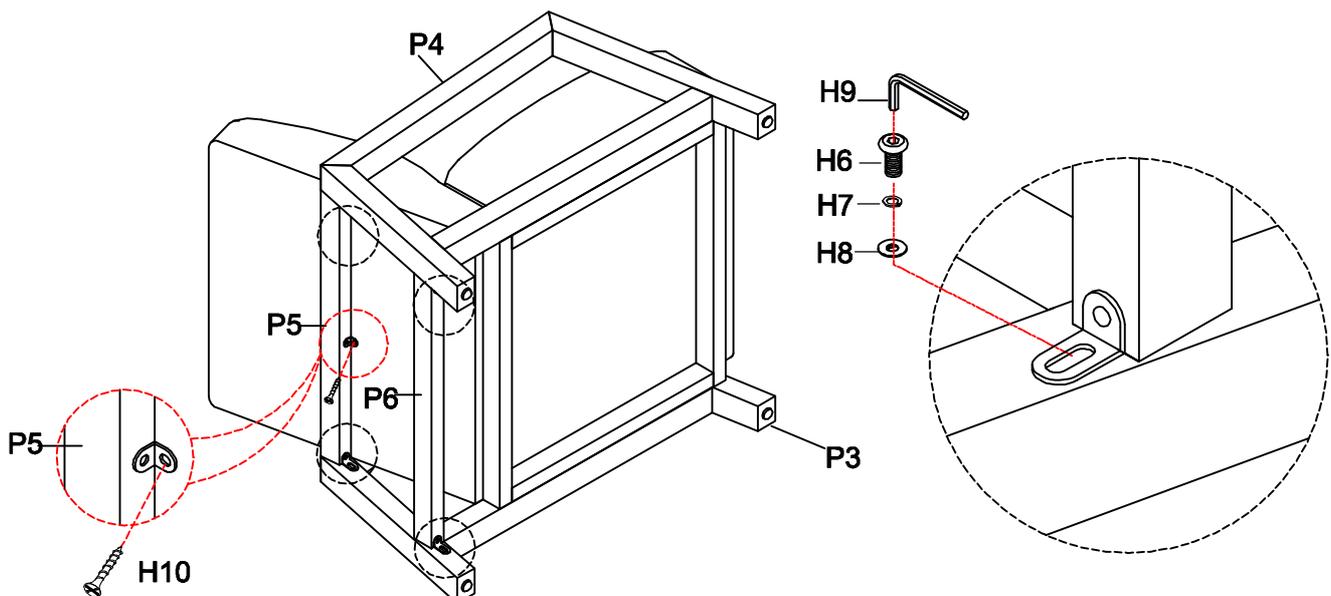

Caution: Failure to follow these instructions may cause the bolts to misalign during assembly.

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase