


ASSEMBLY INSTRUCTIONS

ASHLYN 2-TIER RATTAN COFFEE TABLE


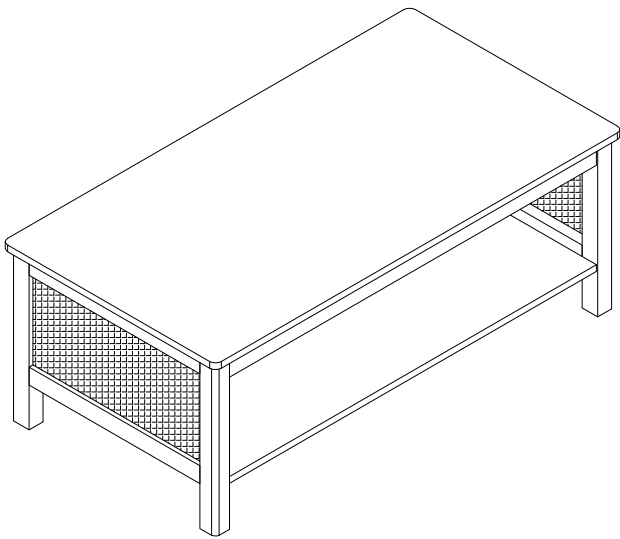




Please read below before assembly:

- Assemble the product on a flat, soft surface such as a carpet or cloth to prevent scratching the finish.
- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.
- Failure to follow these instructions may cause the bolts to misalign during assembly.

DISCLAIMERS:

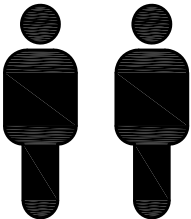
- WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.
- BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTEN AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.
- SET THE ELECTRIC DRILL TO A LOW TORQUE SETTING TO PREVENT PRODUCT DAMAGE.

| | | | |
|---|---|--|---|
|  | TOOLS REQUIRED (NOT INCLUDED) | ESTIMATED TIME | |
| | | MANUAL TOOL | ELECTRIC TOOL |
| PEOPLE NEEDED |  |  |  |
| | | 20 Minutes | 10 Minutes |

Using Camlocks

Step 1


Connect the male camlock with a piece of board.

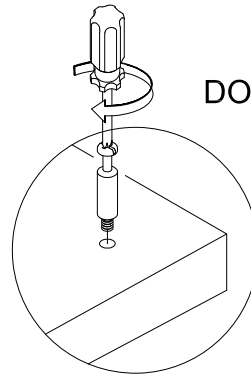

DO NOT OVER TIGHTEN.

Step 2


Insert the male camlock into the predrilled hole.

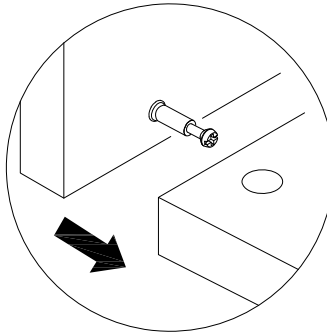

Step 3

Insert the female camlock.


Note: Ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

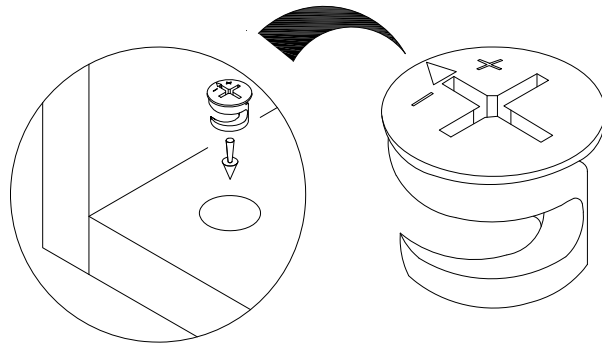







Step 4


Turn the female camlock clockwise with a screwdriver.

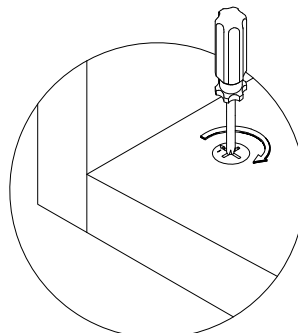You should feel a click when the camlock is locked in place, the joint is now secure.







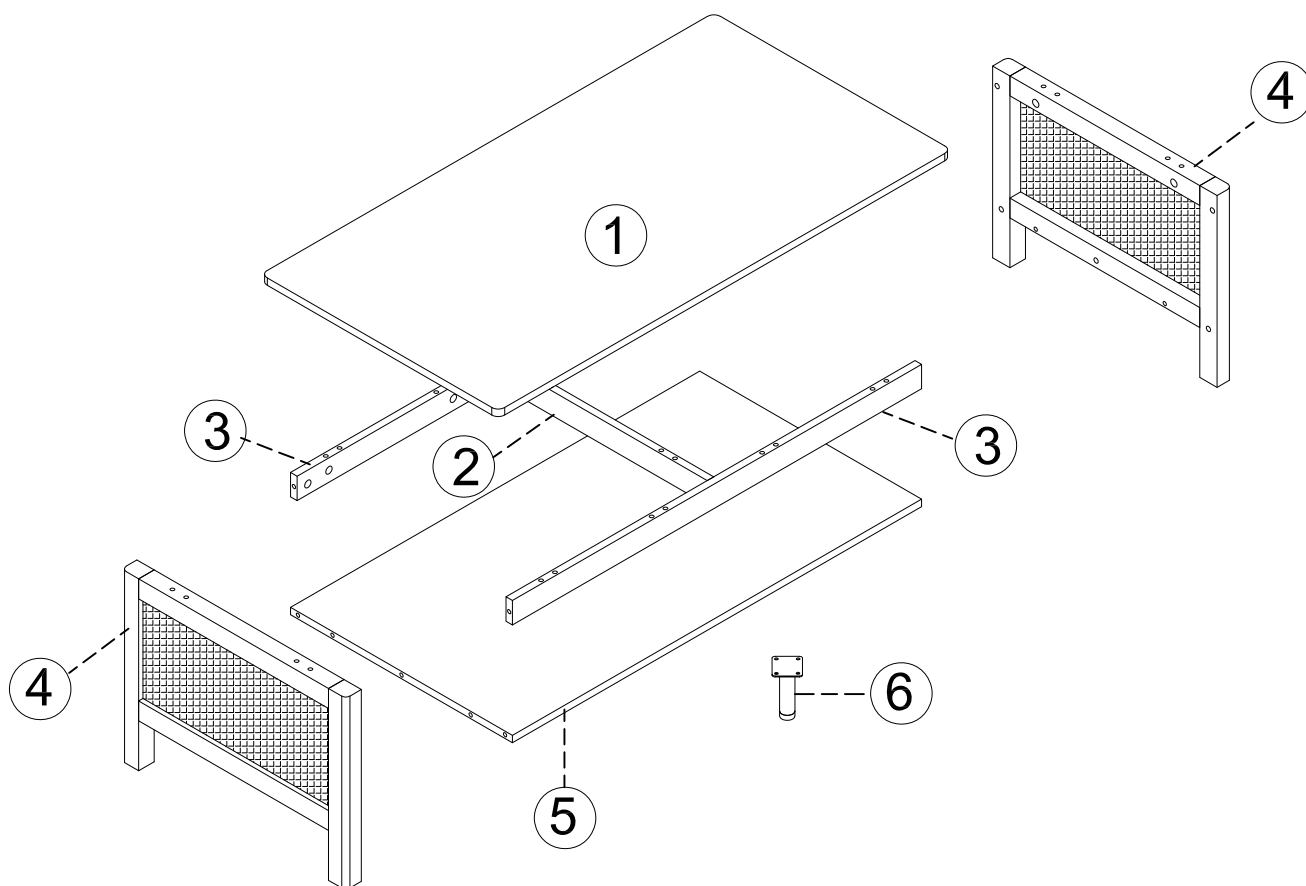


PARTS LIST

| | | | |
|---|------------------------|---|-------|
| ① | TABLE TOP |  | 1 PC |
| ② | CENTER STRETCHER |  | 1 PC |
| ③ | FRONT & BACK STRETCHER |  | 2 PCS |
| ④ | SIDE FRAME |  | 2 PCS |
| ⑤ | SHELF |  | 1 PC |
| ⑥ | CENTER SUPPORT LEG |  | 1 PC |




HARDWARE LIST

| | | | |
|---|---------------------------------|---|----------------|
| A | MALE CAMLOCK - Ø1/4 " x 1" |  | 26 PCS+3 EXTRA |
| B | FEMALE CAMLOCK - Ø5/8 " x 1/2" |  | 26 PCS+3 EXTRA |
| C | WOOD DOWEL- Ø5/16 " x 1-3/16" |  | 18 PCS+2 EXTRA |
| D | METAL PLATE - 2-3/4"L x 1-3/4"W |  | 4 PCS |
| E | BOLT - Ø1/4" x 1/2" |  | 8 PCS |
| F | ALLEN KEY - 1/4" |  | 1 PC |
| G | SCREW - Ø1/8" x 1/2" |  | 4 PCS+1 EXTRA |


STEP 1

LOCATE PARTS AND HARDWARE PER BELOW DRAWING.

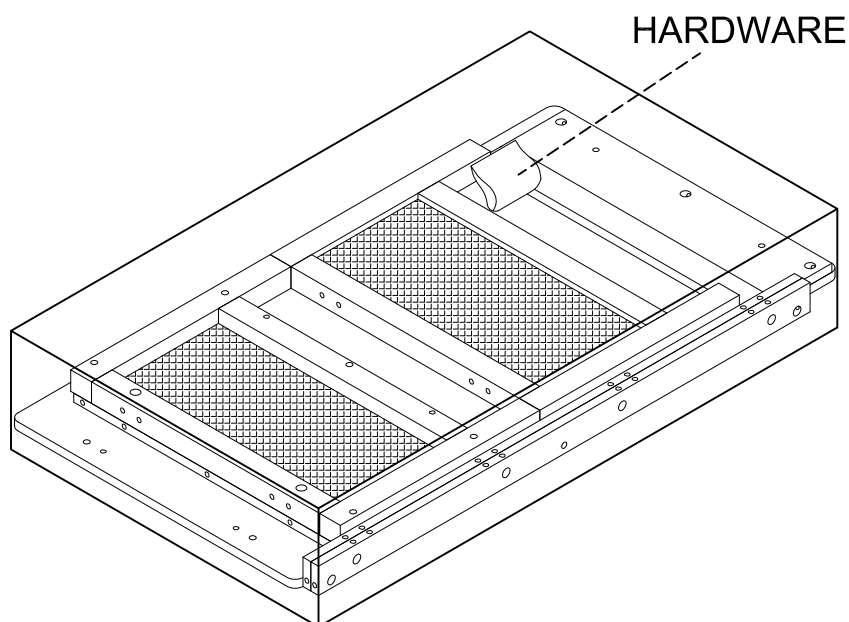


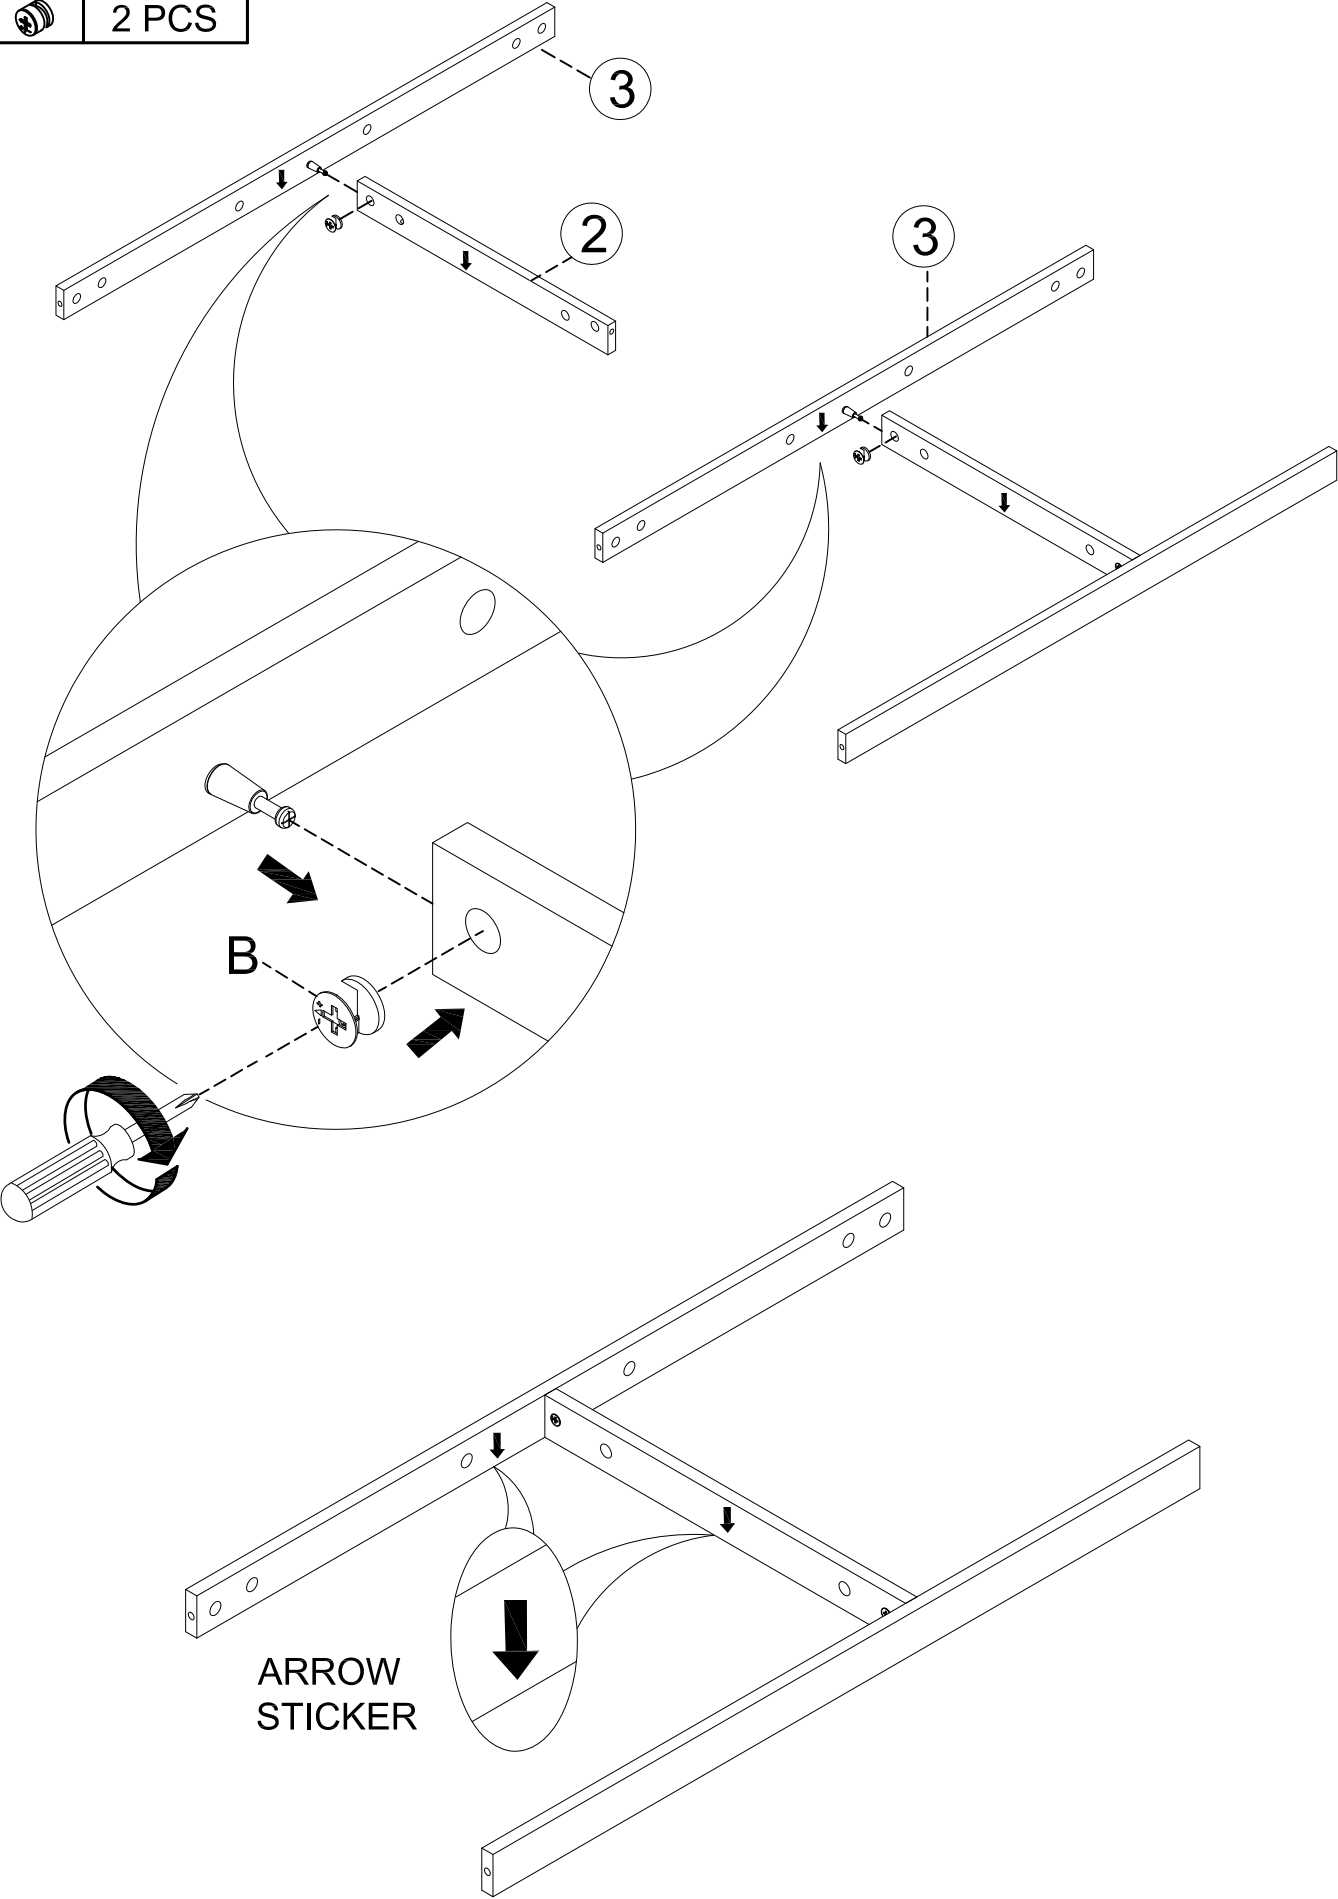
STEP 2

| | | |
|---|---|--------|
| A |  | 26 PCS |
|---|---|--------|

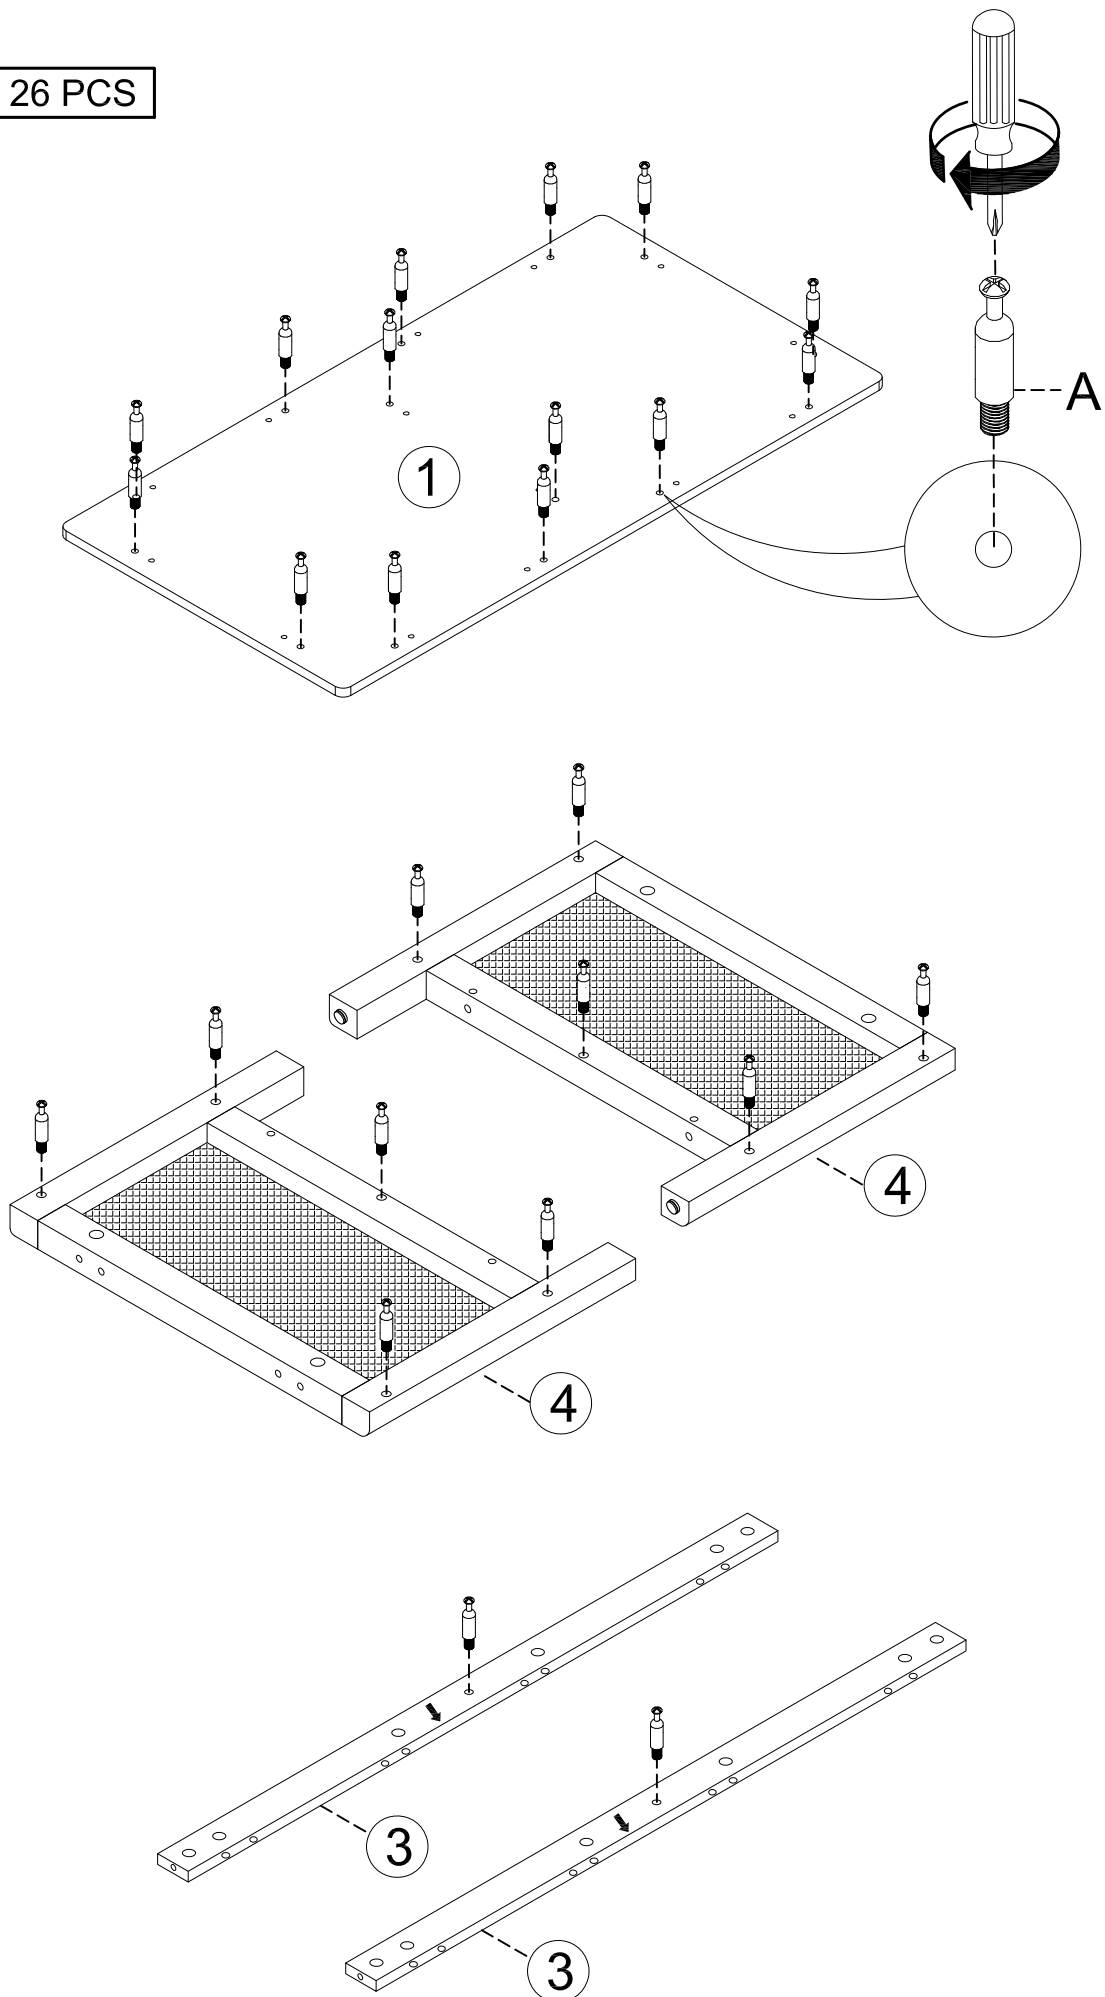




STEP 3

| | | |
|---|---|-------|
| B |  | 2 PCS |
|---|---|-------|






STEP 4
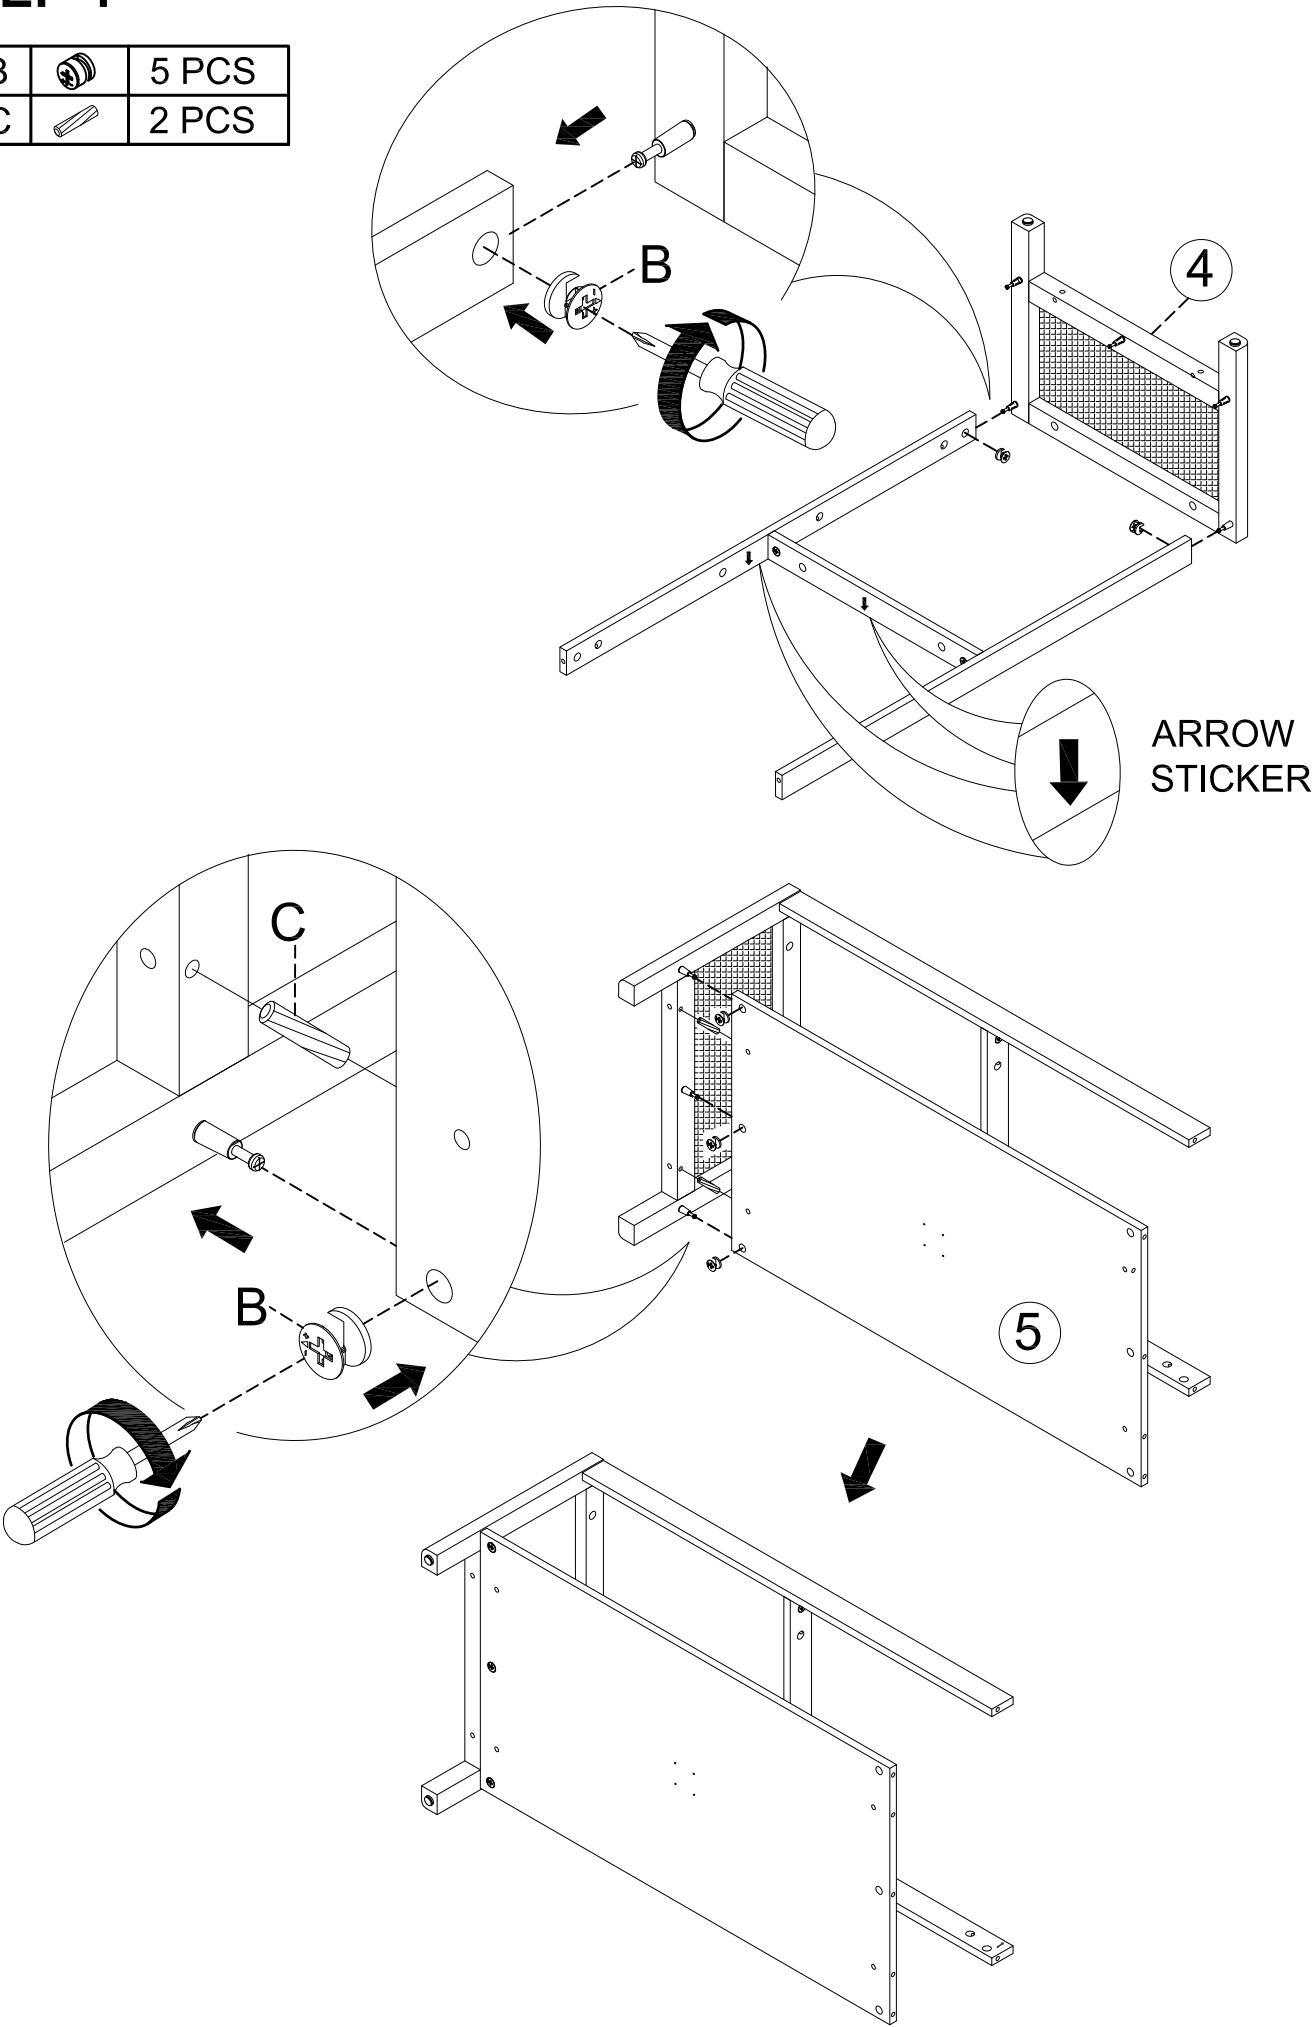
| | | |
|---|---|-------|
| B |  | 5 PCS |
| C |  | 2 PCS |




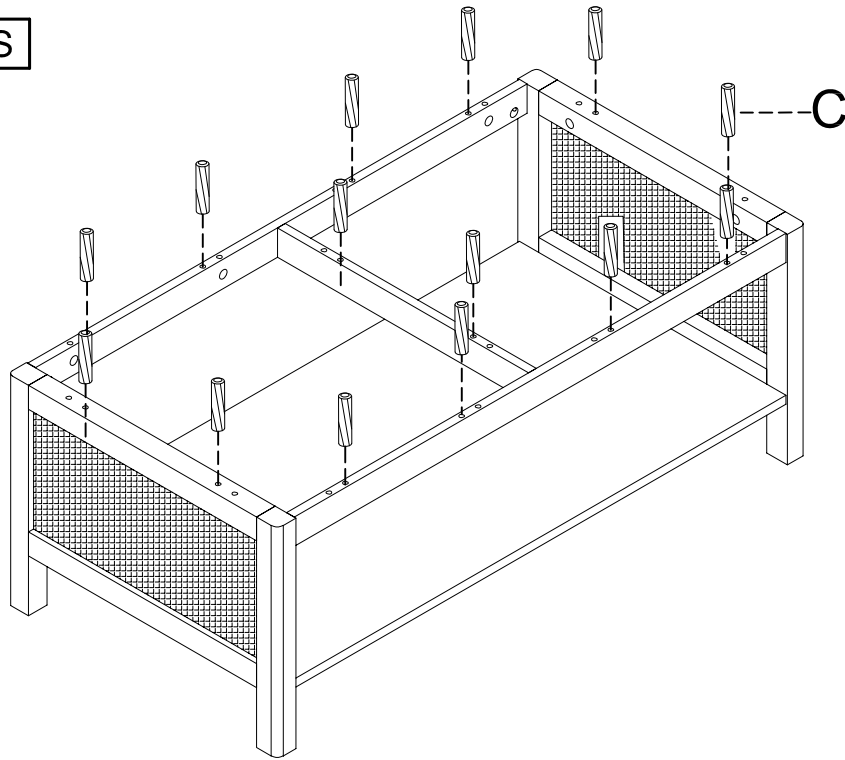
STEP 5

| | | |
|---|---|-------|
| B |  | 5 PCS |
| C |  | 2 PCS |

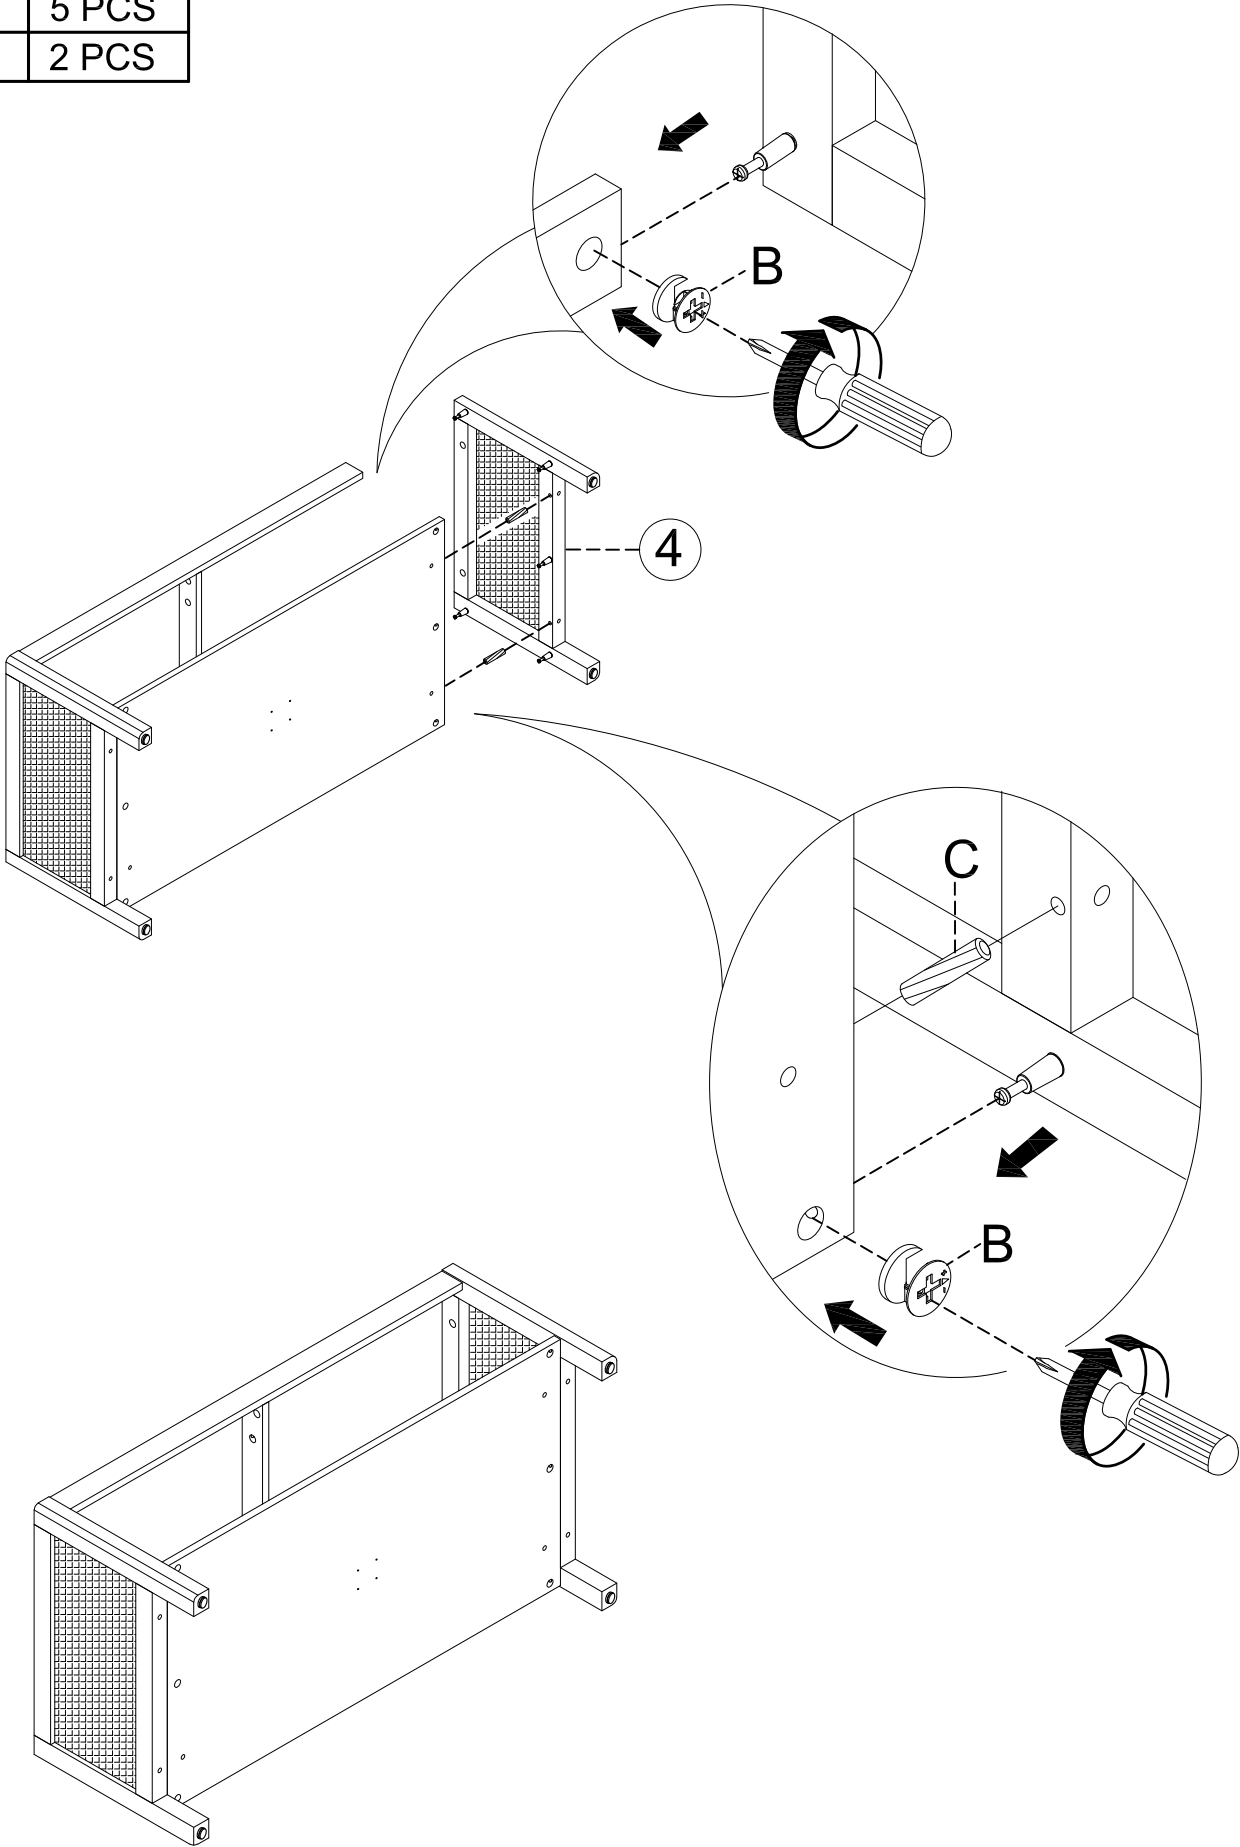


STEP 6


| | | |
|---|---|--------|
| C |  | 14 PCS |
|---|---|--------|




STEP 7

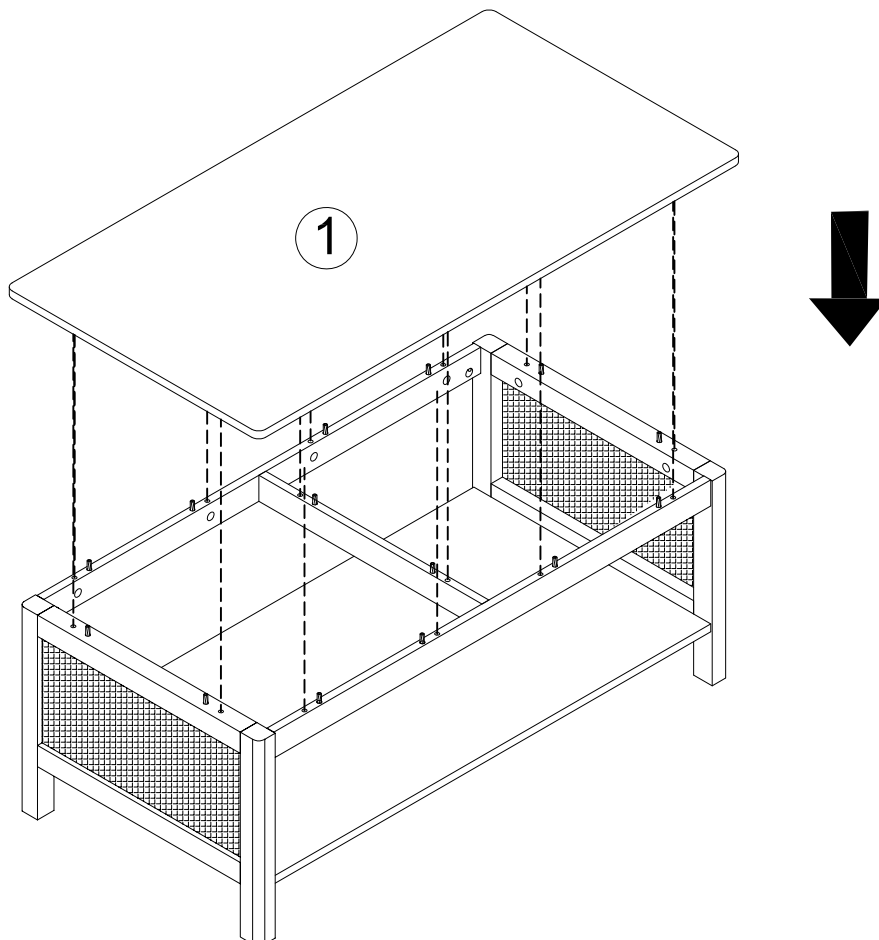


STEP 8

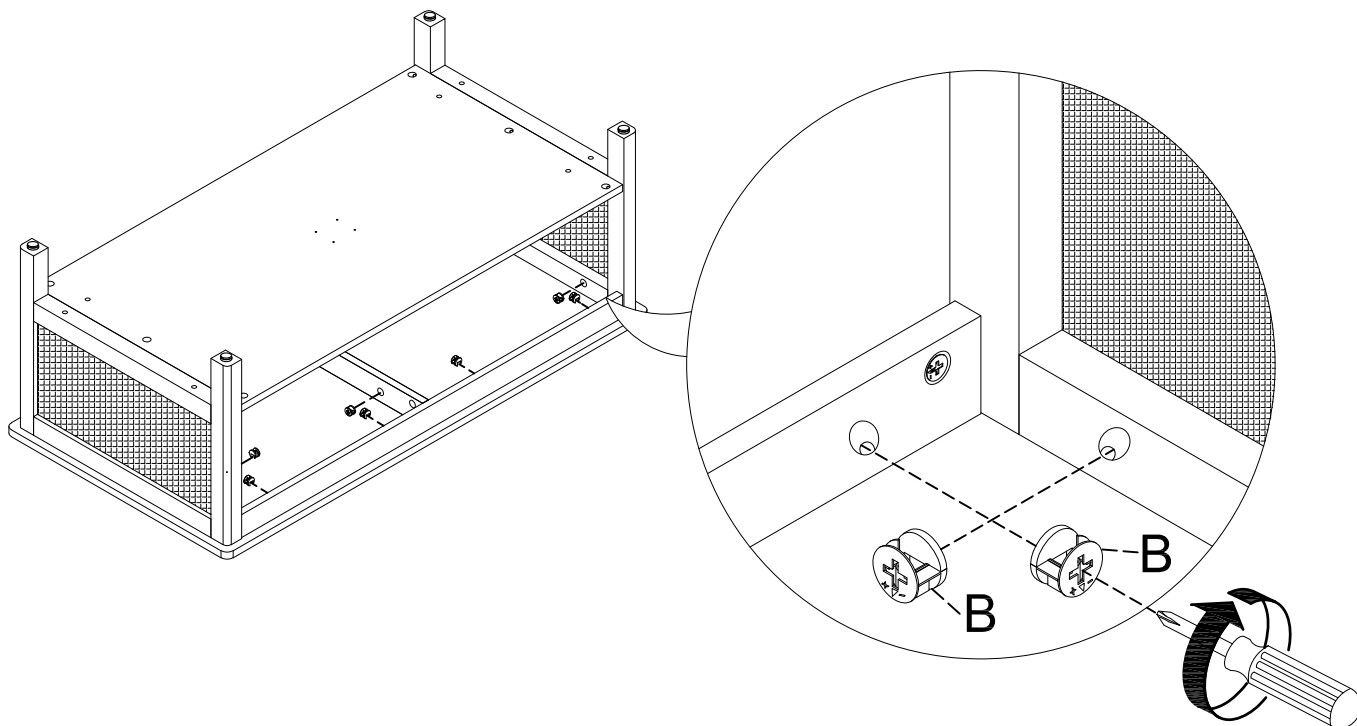


| | | |
|---|---|--------|
| B |  | 14 PCS |
|---|---|--------|

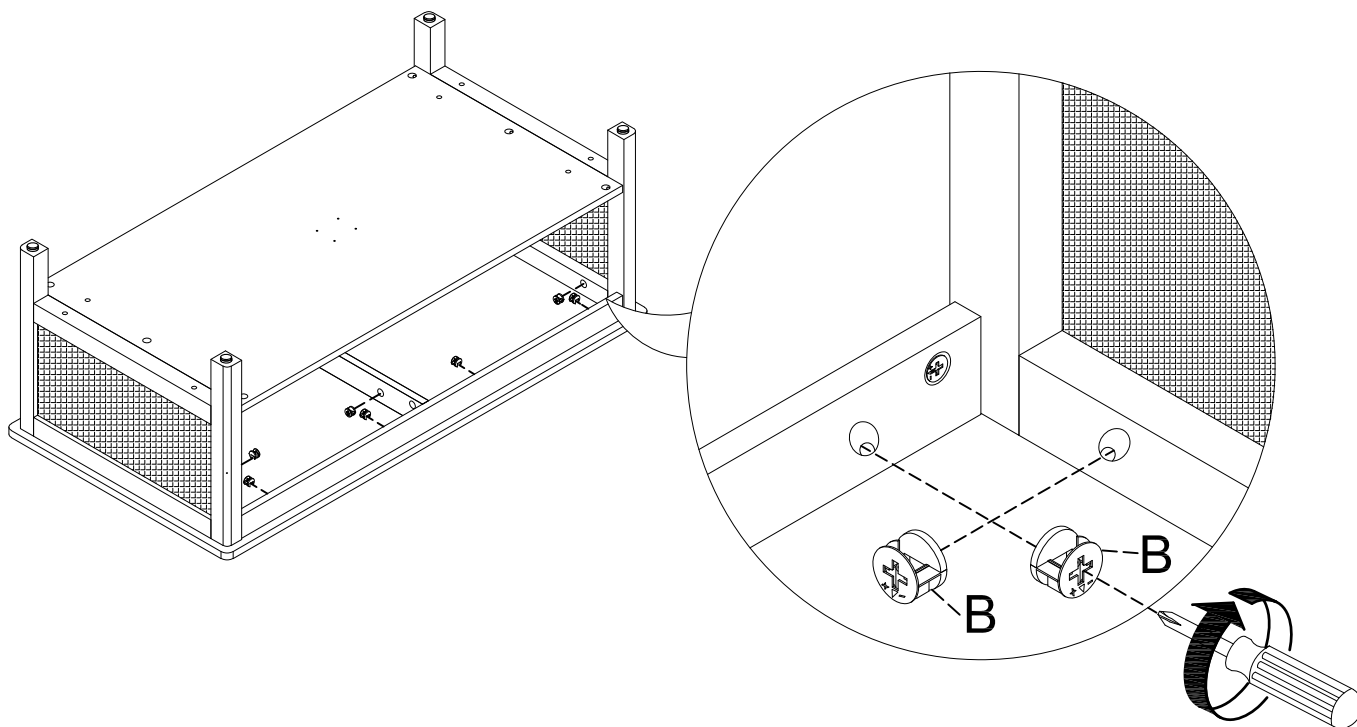


REPEAT THE ABOVE STEP FOR THE OTHER SIDE.




STEP 9

| | | |
|---|---|-------|
| D |  | 4 PCS |
| E |  | 8 PCS |
| F |  | 1 PC |

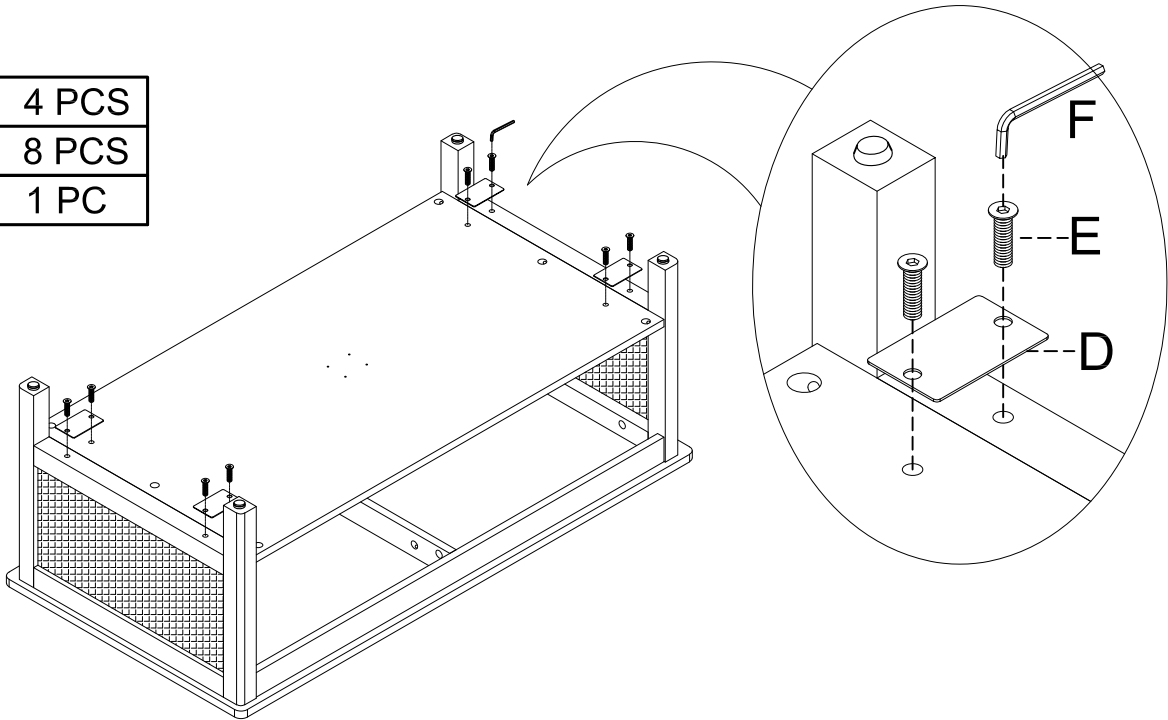

STEP 10

| | | |
|---|---|-------|
| G |  | 4 PCS |
|---|---|-------|

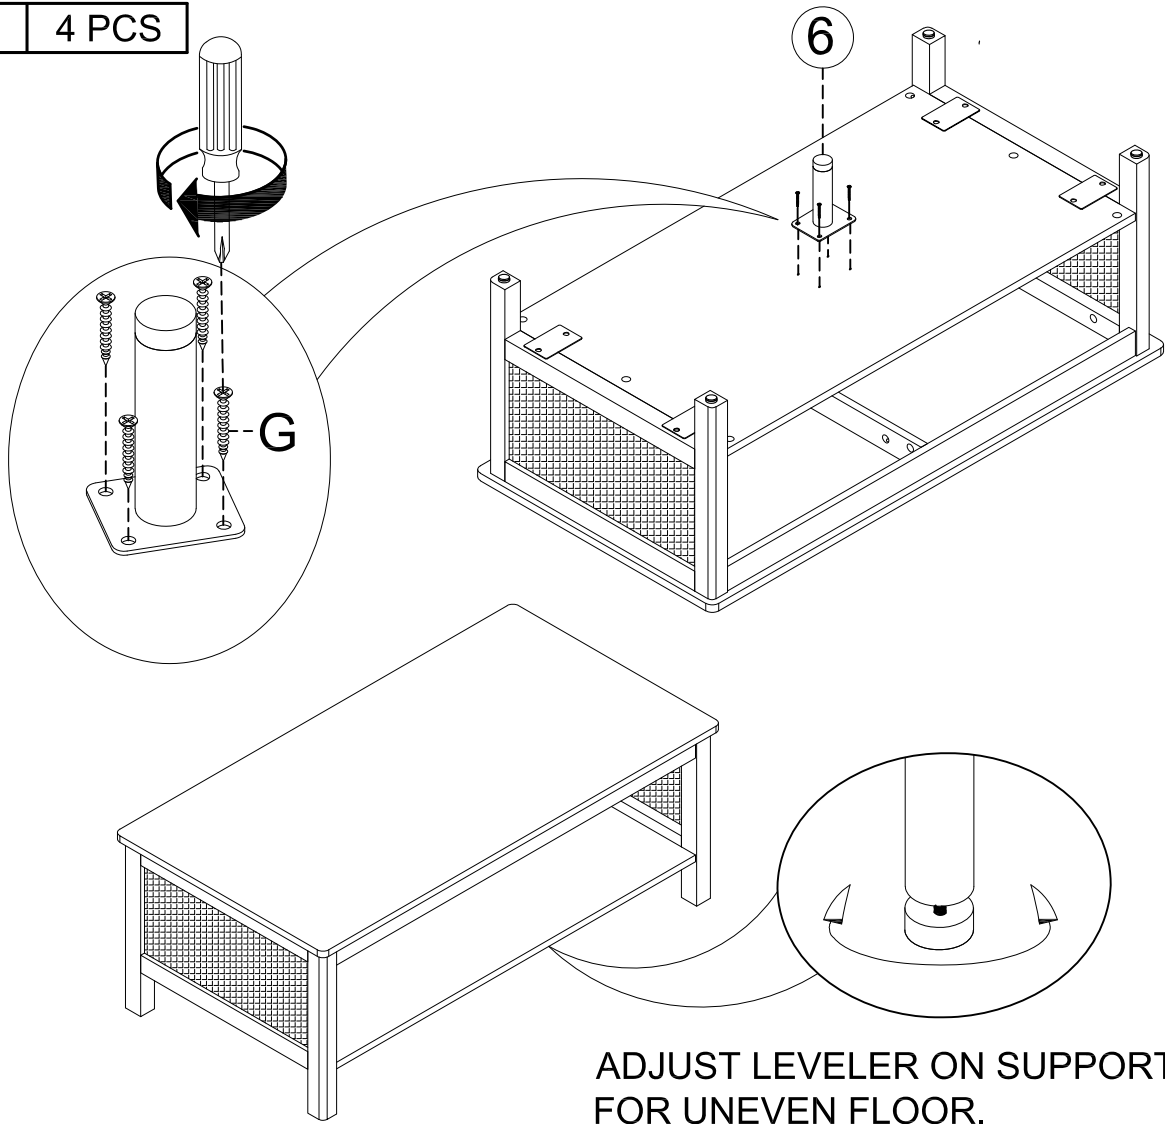

Care & Maintenance

Do...



Wipe up spills immediately.



Dust and pick-up spills using a clean, non-colored, lint-free, dry cloth.



Use mild non-abrasive soap and water.


Don't...



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Do not place furniture in direct sunlight.



Do not place furniture near heating or cooling vents.



Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside. For indoor use only.