

ASSEMBLY INSTRUCTIONS

Description: Glass Chandelier

Important Safety Instructions:

- These instructions are provided for you safety. It is important that they are read carefully and completely before assembling fixture.
- We strongly recommend that a professional electrician install all direct wire fixtures.
- This fixture has been rated for up to (3) 60-watt maximum TYPE A bulb (no included) or (3) 13-watt compact fluorescent light bulb (no included). To avoid the risk of fire, do not exceed the recommended wattage.

Caution: The glass shade is easy broken, please be care for the glass shade hit each other during you install it.

Pre-assembly:

- For your safely and convenience, assembly by two people is recommended.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts Enclosed:

Description	OTV
Description	QTY
Mounting plate	1
Canopy	1
Shade 1	1
Shade 2	1
Shade 3	1
	Canopy Shade 1 Shade 2

To im nstall you will need: Screwdriver Electrical tape

Hardware included:

Item	Description	QTY
а	Mounting plate screws	2
b	Plastic wire connectors	3
С	Finials	2

To Assemble:

Step 1. Shut off the main electrical supply from the main fuse box/circuit breaker!

Step 2. Determine the desired hanging height of shades by adjusting the cord lengths. Push or pull the wire through the top tubes and set the correct length by moving the 2 hole plastic clips on each wire so they will prevent the wires from moving further. Leave approx 8" slack on each wire to make connections to home wiring and cut off the excess.

Step 3. Gently pull wiring from ceiling outlet box and allow the wires to hang.

Step 4. It is imperative that the outlet box in your home be properly grounded. If your outlet does not have a GROUND WIRE, be sure to insert the green ground screw on the mounting plate (A) facing DOWN, and wrap the fixture's bare copper ground wire around the green ground screw on the mounting plate. If your outlet box has a GROUND WIRE (green or bare wire) attach this wire to the bare copper GROUND WIRE of the fixture. Fasten with a plastic wire connector and wrap with electrical tape.

Carefully inspect the lantern's two fixture wires. One has very fine ridges molded into the plastic covering - this is the NEUTRAL WIRE. The second wire's covering is smooth - this is the HOT WIRE.

Connect the NEUTRAL WIRE from the fixture to the NEUTRAL JUNCTION BOX WIRE from the outlet ox (usually white). Fasten each together with a plastic wire connector and wrap the connection with electrical tape. Be sure that no wire strands are exposed.

Connect the HOT WIRE from the fixture to the HOT JUNCTION BOX WIRE from the outlet box (usually black). Fasten each together with a plastic wire connector (b) and wrap the connection with the electrical tape. Be sure that no wire strands are exposed. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.

Step 5. Tuck the wire connections neatly into the ceiling outlet box.


Step 6. Attach the mounting plate (A) to the ceiling outlet box (the long bolts will be hanging down) using two mounting plate screws(a). Tighten with screwdriver.

Step 7. Attach the canopy (B) with shade (C, D, E) to the long bolts hanging down from the mounting plate(A) and secure with small finials (c). Take care that the glass shades do not hit each other during this step as the shades are extremely fragile.

Step 8. Insert light bulbs (not included) into sockets.

Step 9. Restore power to outlet box and test fixture.

Step 10. Assembly is complete.

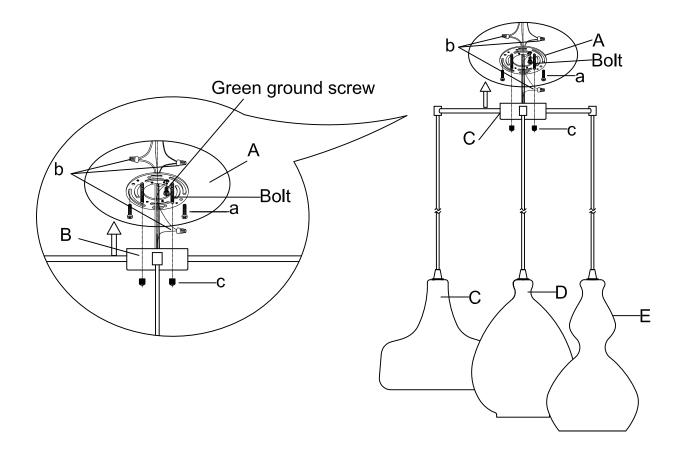

Care Instructions:

Wipe with soft dry cloth only

Always avoid the use harsh chemicals or abrasives as they may damage the finish

Thank you for you purchase